


Kit 1611

FIAT 500, 3-dr Hatchback, 07-*



FIAT 500, 3-dr Hatchback, 11-**

***Without glass roof**

 
****North America, Without glass roof**

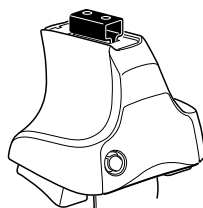

480R Rapid Traverse
754 Rapid System

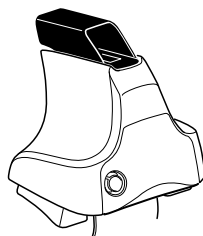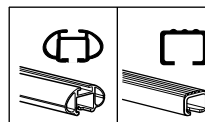  

480 Traverse

 

THULE[®]
SWEDEN

ISO 11154-E

Max. 50 kg
Max. 110 lbs

x1

x4

x4

x4

480R Rapid Traverse
754 Rapid System

x1

x4

x4

x4

480 Traverse

x2	x2 23 mm	x1 17 mm	x2 23 mm	x2
x2	x2	x2 23 mm	x2	x2
x4	x2	x4	x2	x2
x4	x4	x4	x4	x4

1099 x2

932 x2

137 x4

x1

Kit

 
1




480R Rapid Traverse
754 Rapid System



480 Traverse

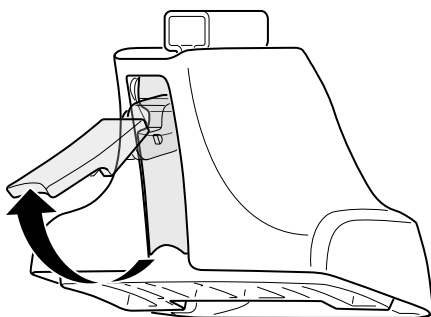











2

 

480R Rapid Traverse
754 Rapid System



          480 Traverse

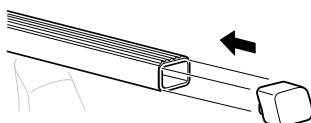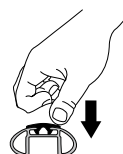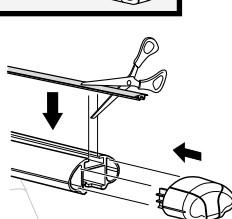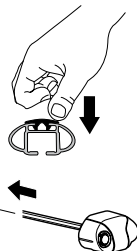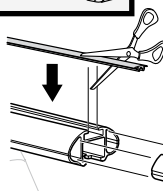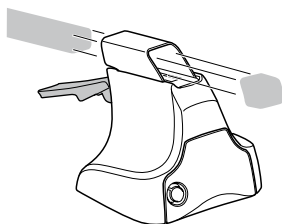
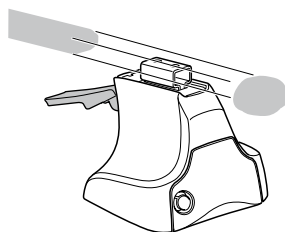


3




754 Rapid System

  1

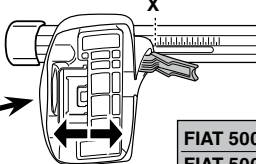


2

 


		X
FIAT 500, 3-dr Hatchback, 07-*		33,5
FIAT 500, 3-dr Hatchback, 11-**		33,5

 1

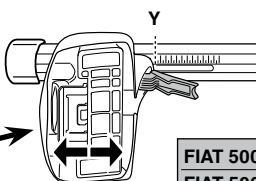

2

 

		Y
FIAT 500, 3-dr Hatchback, 07-*		28
FIAT 500, 3-dr Hatchback, 11-**		28

 


480R Rapid Traverse




480 Traverse

1




2

 


	X inch	X mm
FIAT 500, 3-dr Hatchback, 07-*	38 ⁷ / ₈ "	986 mm
FIAT 500, 3-dr Hatchback, 11-**	38 ⁷ / ₈ "	986 mm

 1




2

 

	Y inch	Y mm
FIAT 500, 3-dr Hatchback, 07-*	36 ⁵ / ₈ "	931 mm
FIAT 500, 3-dr Hatchback, 11-**	36 ⁵ / ₈ "	931 mm







 
4

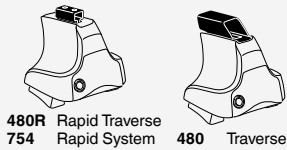


FIAT 500, 3-dr Hatchback, 07-*

FIAT 500, 3-dr Hatchback, 11-**

     
 
 
SRA

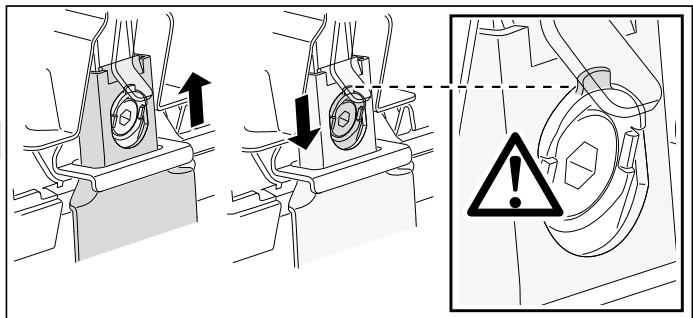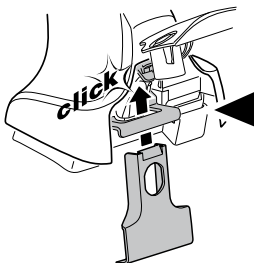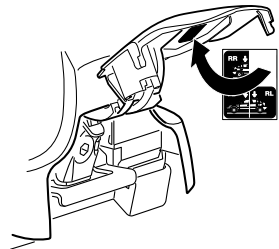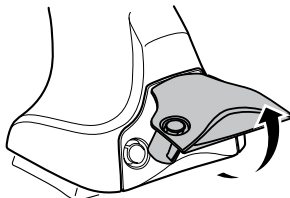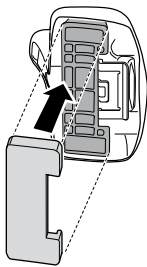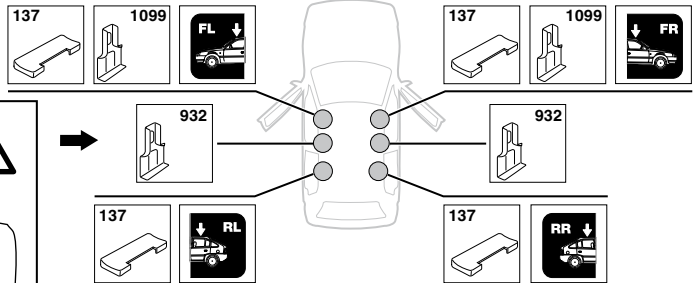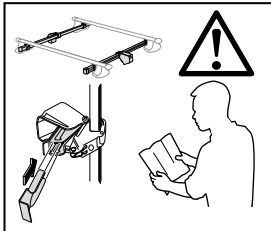

5

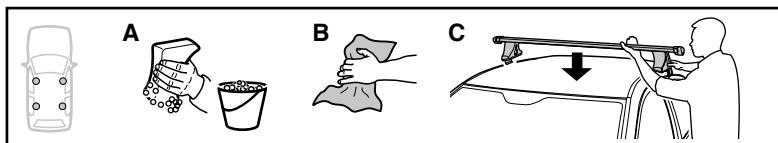 






	X mm	Y mm	Z mm	X inch	Y inch	Z inch
FIAT 500, 3-dr Hatchback, 07-*	225 mm	600 mm	350 mm	8 7/8"	23 5/8"	13 3/4"
FIAT 500, 3-dr Hatchback, 11-**	225 mm	600 mm	350 mm	8 7/8"	23 5/8"	13 3/4"

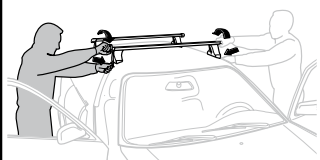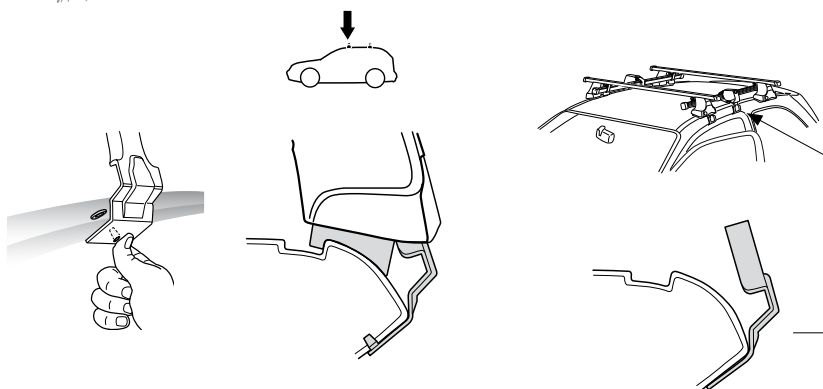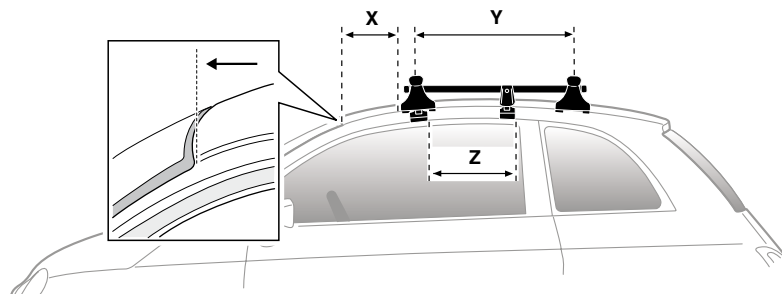   



GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apretar alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно



CZ Pokrétla багажника dokręcaj dokręcaj naprzemiennie.
SK Dotahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egymástól fűggetlenül szorítandó
GR Σφιγγείτε εναλλάξ
TR Dönüşümlü sıkın
中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ชนในแบบสลับ

     6

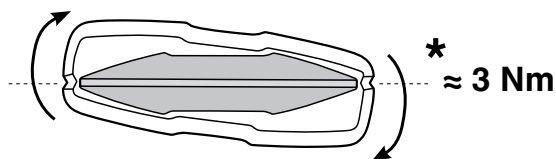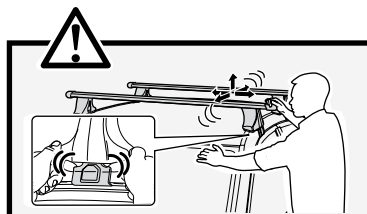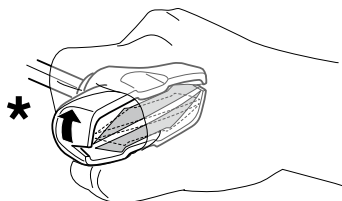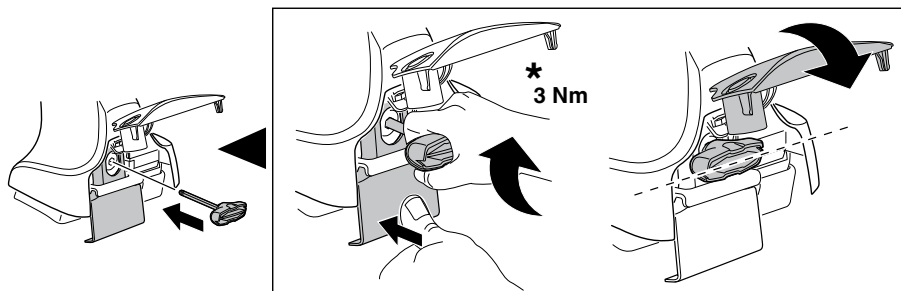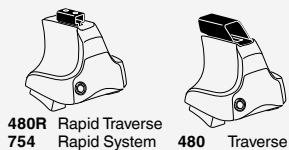

7

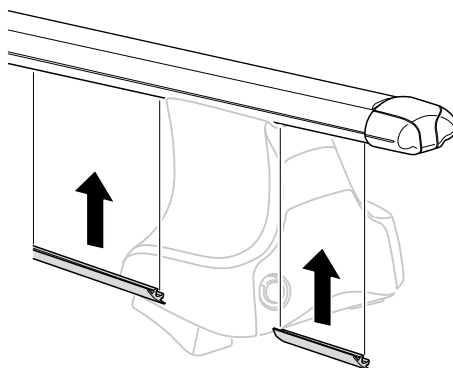  

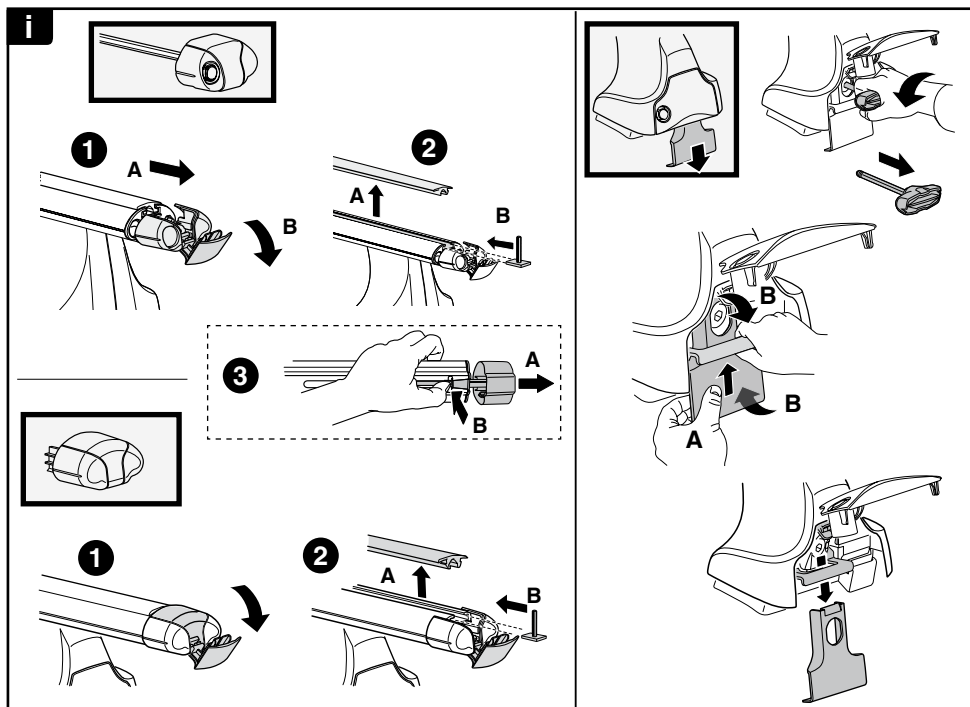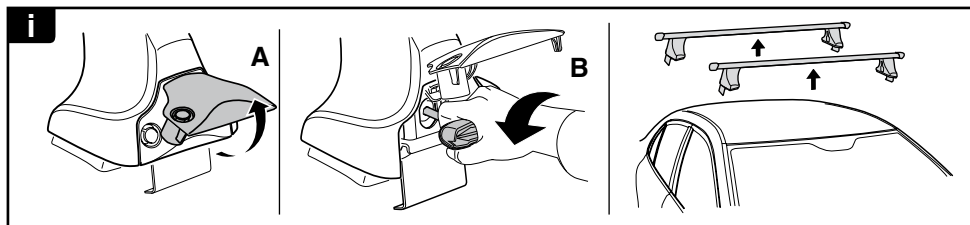  

THULE
SWEDEN

**ONE
KEY
SYSTEM**

544 (x4)

596 (x6)

588 (x8)

NA 510 (x10)

EUR 452 (x12)

ASIA