



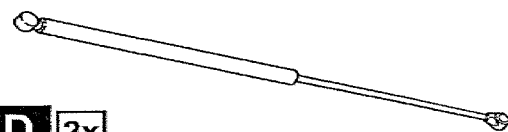


# JEEP WRANGLER


## Hard Top

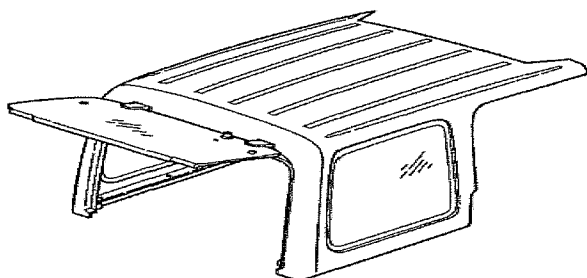

**D** 2x




**E** 8x ONLY 6 REQUIRED ON 2-DR HARDTOP




**F** 6x




**G** 2x

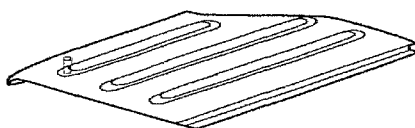


**B**

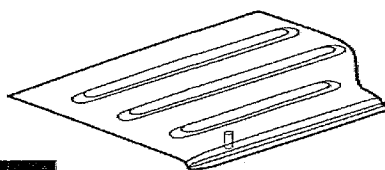


**C**

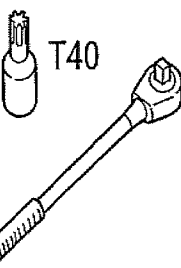


T40

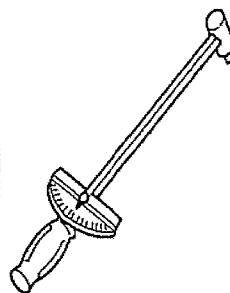

### To Remove Soft Top:

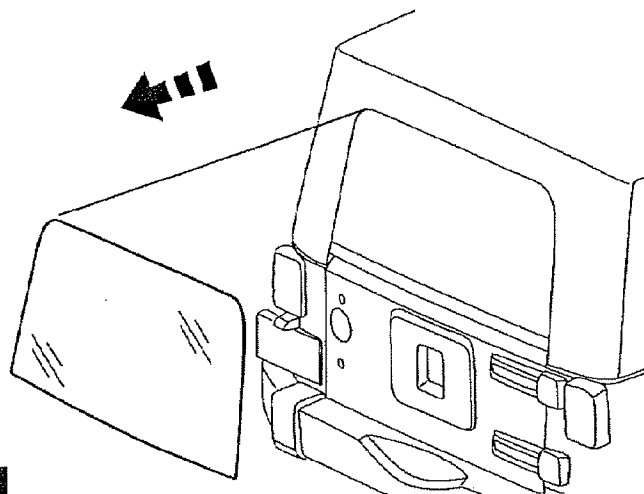


**1**

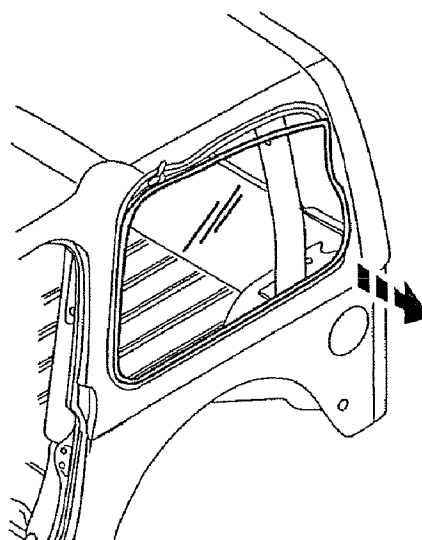

REMOVE BOTH SIDE VINYL WINDOWS.

**2**


**4-DOOR MODEL SHOWN**

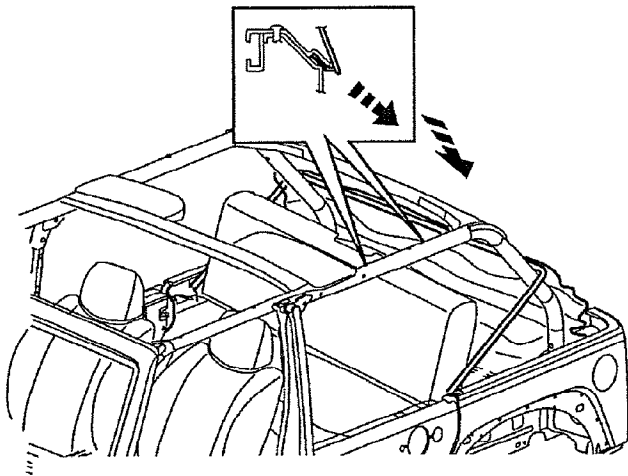

**REMOVE TAILGATE BAR  
TOP IS DISENGAGED ALONG THE SIDES AND  
IN REAR SO IT CAN BE FOLDED AND STORED**


**3**

**4-DOOR MODEL SHOWN**


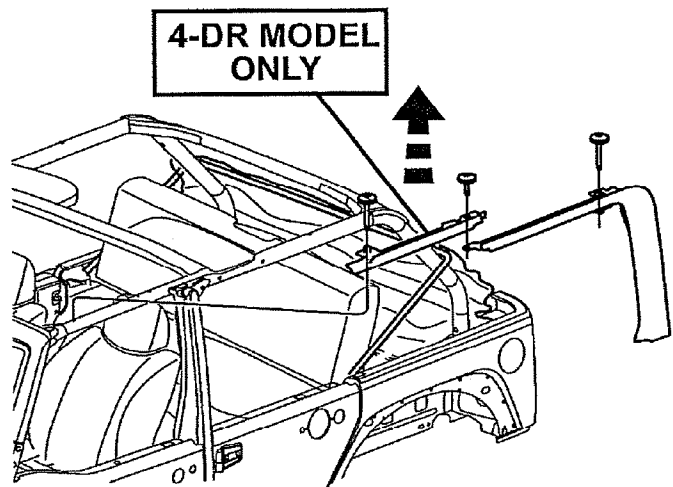


**REMOVE THE SOFT TOP RAIL RETAINERS AS  
SHOWN (2-DR MODEL ONLY HAS 1 RETAINER  
PER SIDE)**



**4**

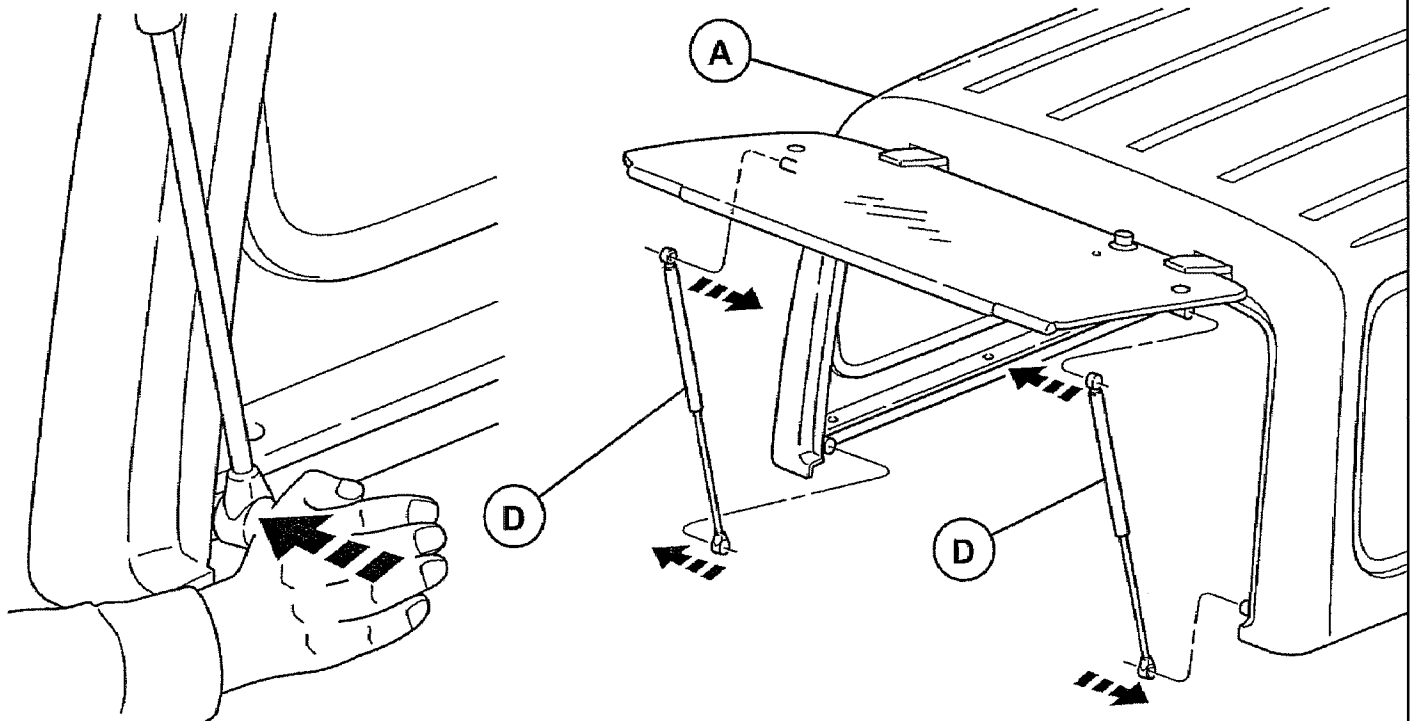


**5**

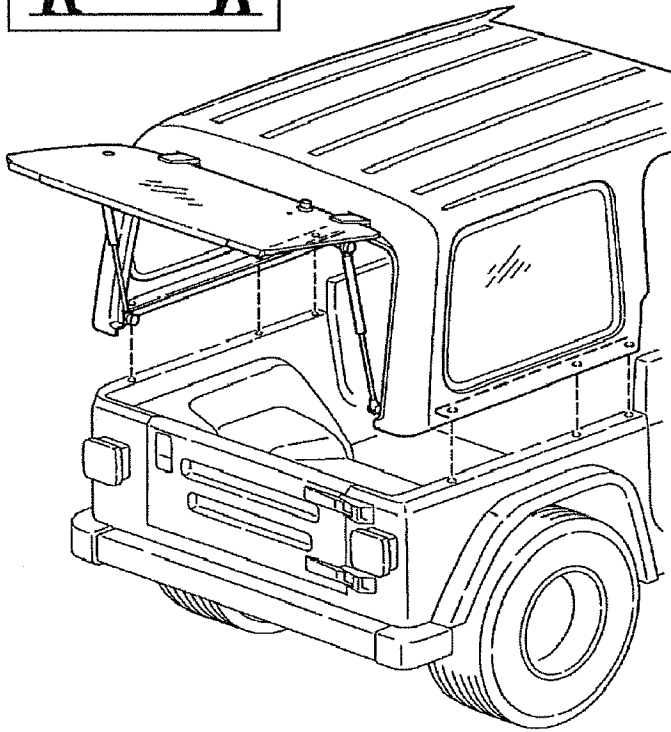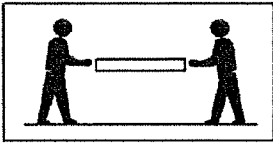

6

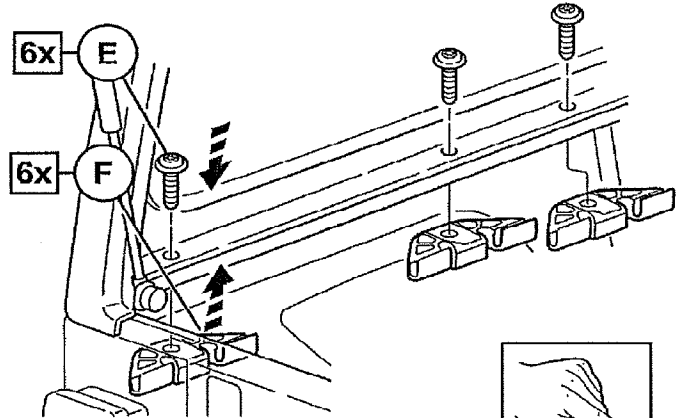
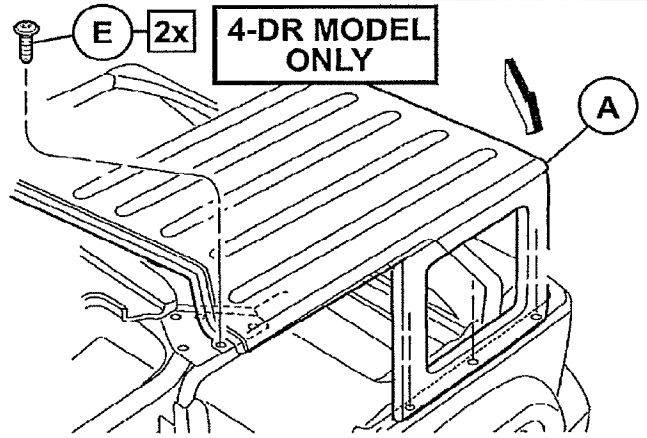



7 FINGER TIGHTEN SCREWS ONLY TO ALIGN ALL (8)

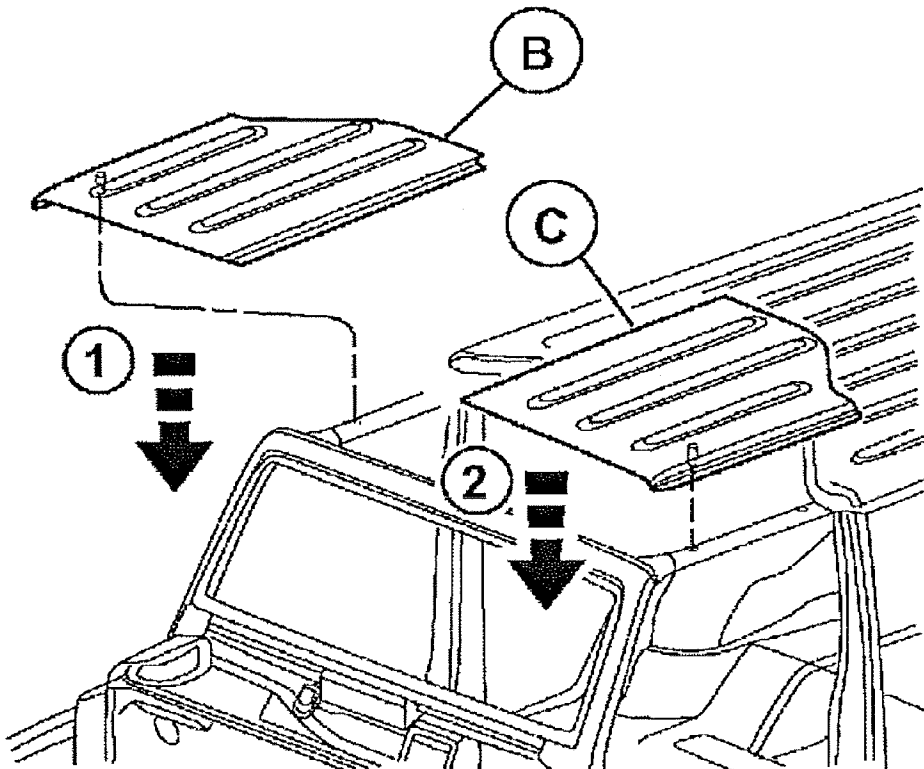



8

**SHOWN IN STEPS 9, 10, 11 IS THE RECOMMENDED SEQUENCE OF SECURING YOUR PANEL  
HARDWARE**

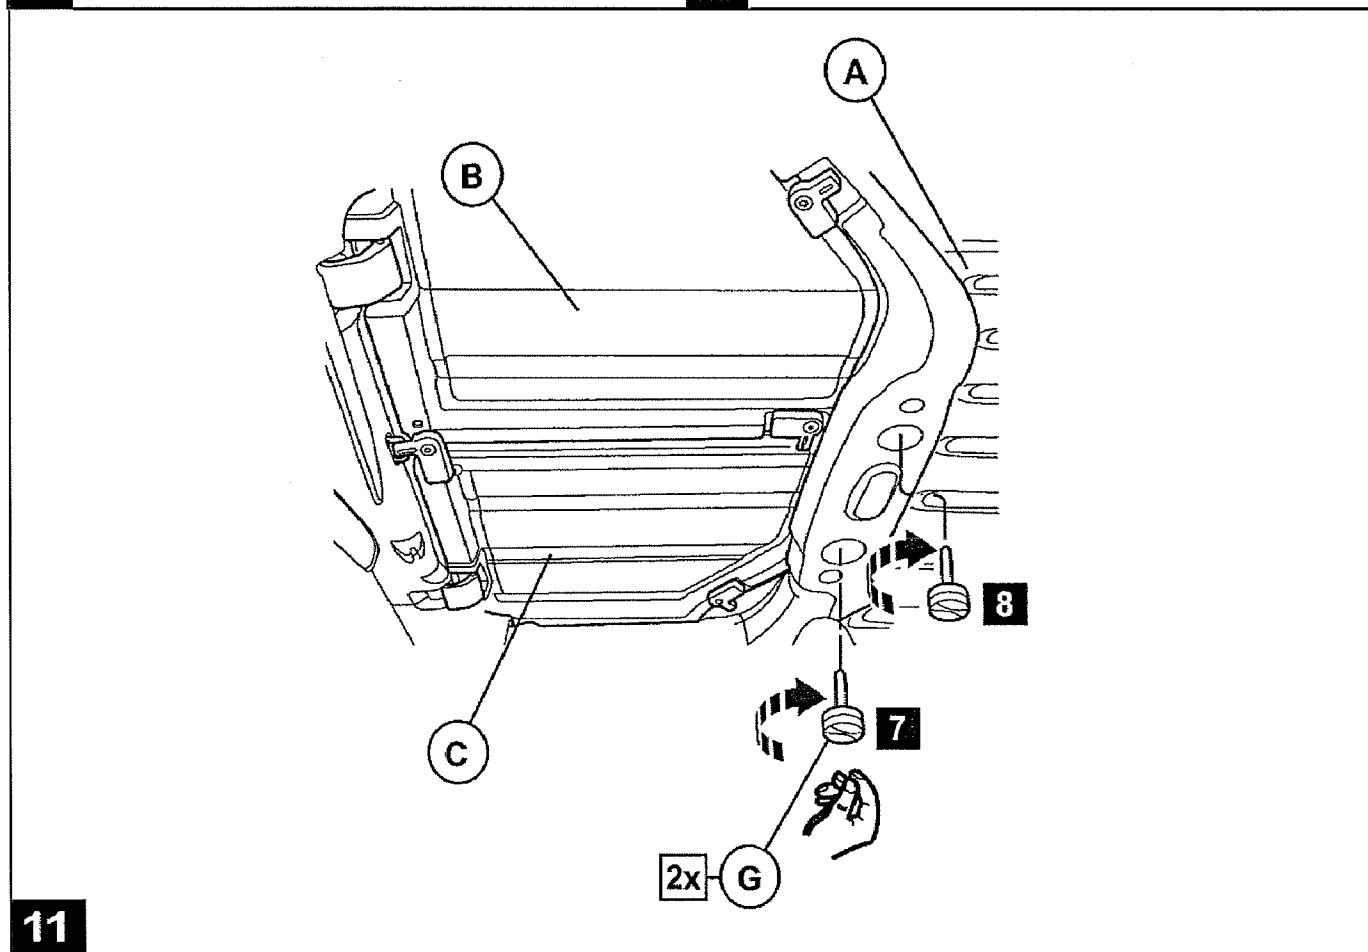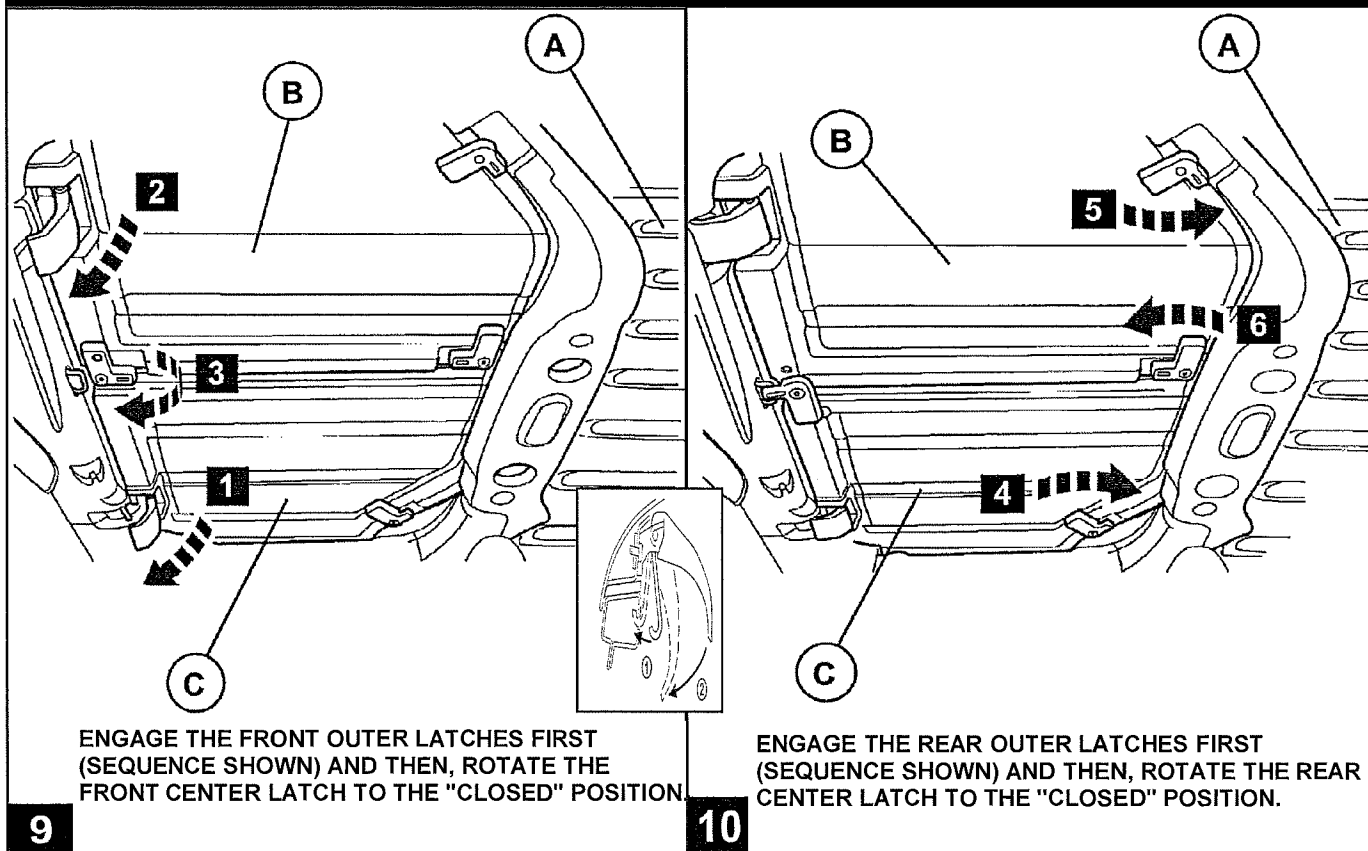

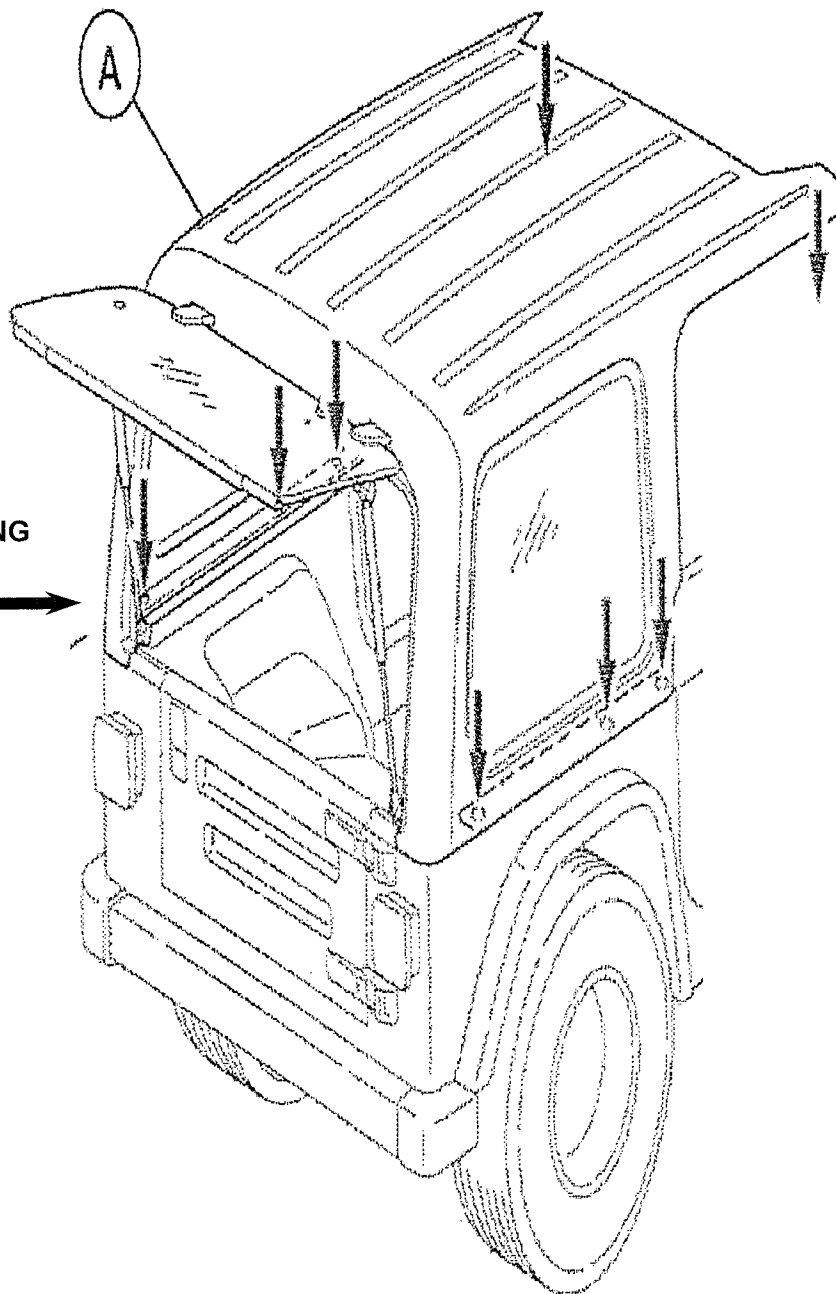

CONNECT WIRING  
AND WASHER  
HOSES

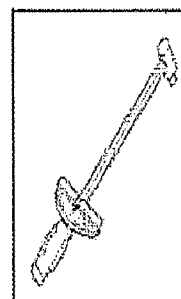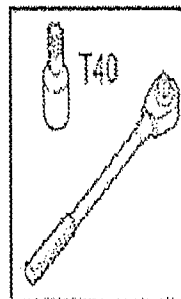

E 8x 105 in.-lbs.  
(17 N·m)