




Charger Pistol Grip Shifter


Part # 82212927AB

• Examine kit to make sure all components are present.

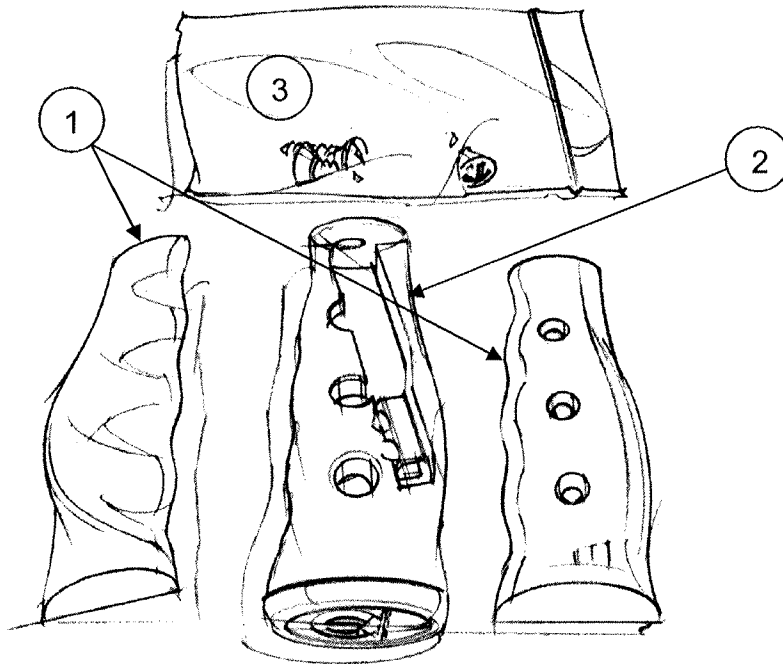


Call Out	Description	Quantity	Service Part (Y/N)	Part Number
1	Plastic side grip pieces	2	N	
2	Stainless center piece	1	N	
3	Stainless steel screws in bag	3	N	
4	Instruction sheet	1	N	


1) Ensure vehicle is in the PARK position.
Using a soft pry tool, "pop" the chrome neck of
the shifter handle down.

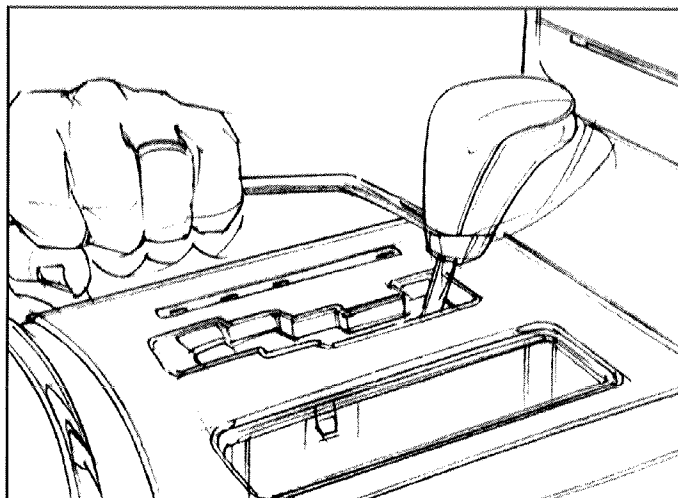


2) Using needle nose pliers, pull retainer clip
from bottom front of shift collar.

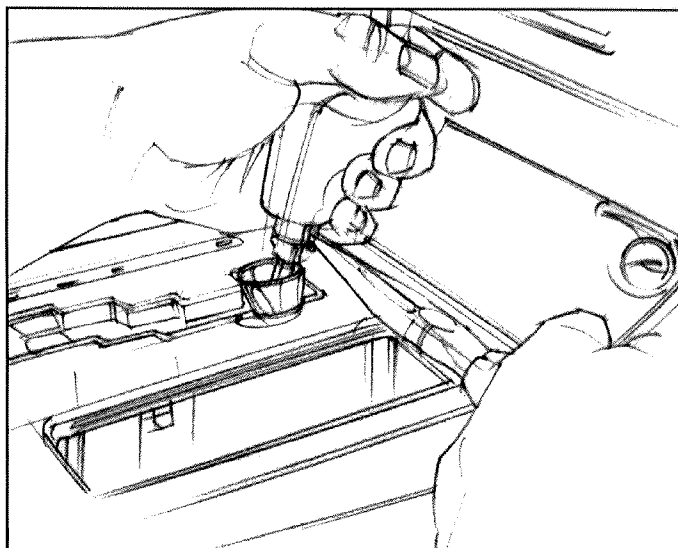


3) Remove shifter and chrome neck.

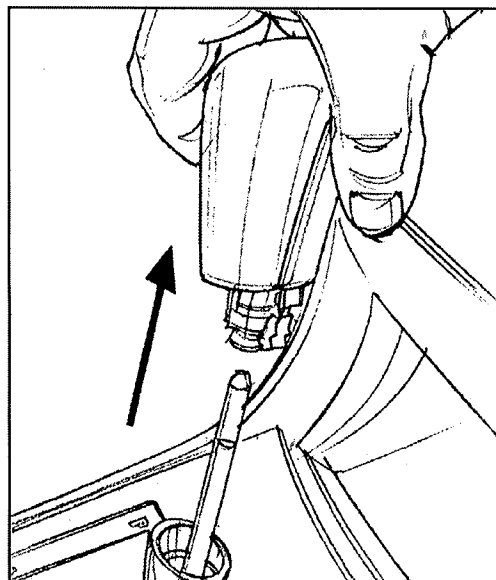


4) Place the Pistol Grip shifter center piece on to shaft.

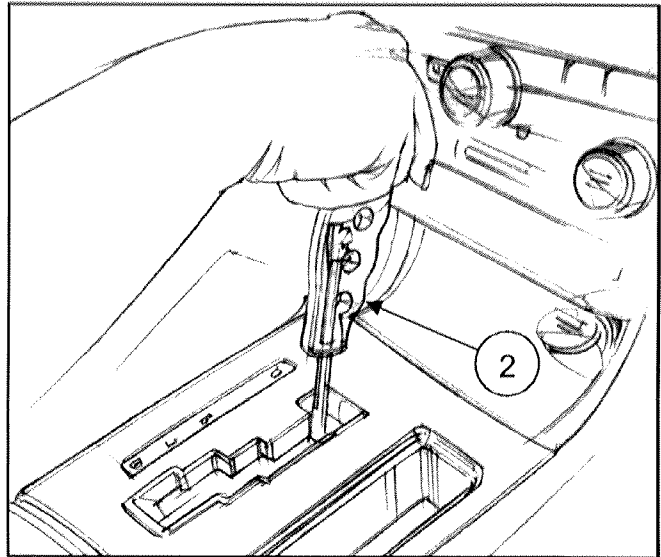


5) Cover with protective mat and tap shifter into place using rubber mallet. Tap until you feel the piece "bottom out".

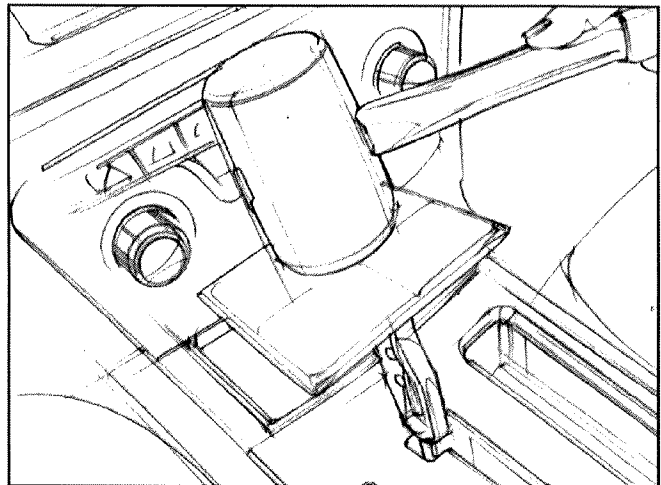

6) Slide left side cover into place on handle.

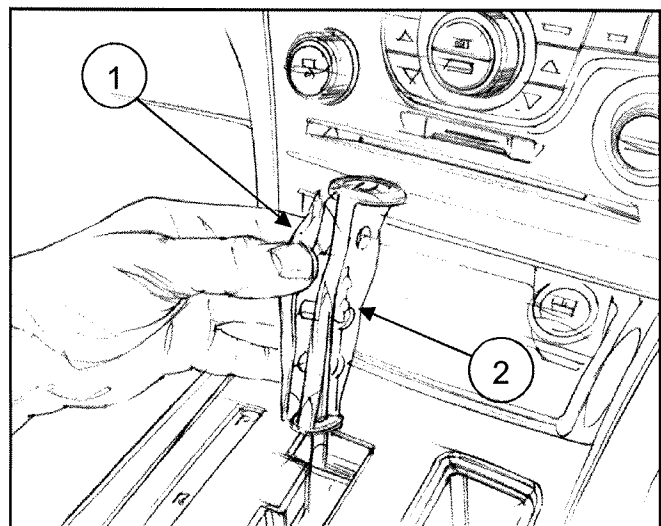


7) Mate right side cover to opposite side.
Squeeze covers together and check position.

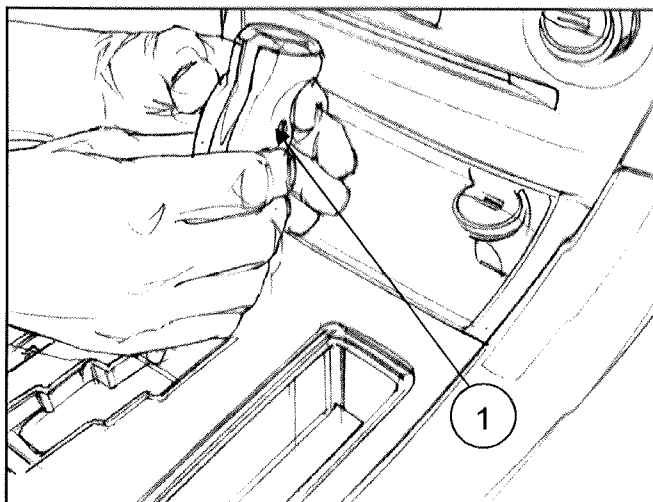

8) Install 3 phillips screws with screwdriver.
Torque screws to 12in.lbs. +/- 2in. lbs.

Once installed, check to insure shifter does not rotate more than 1-2 degrees from center. Ensure plastic sides are installed correctly and there are no misalignments between mating surfaces. Finally, make sure there are no sharp plastic parting lines or tips.

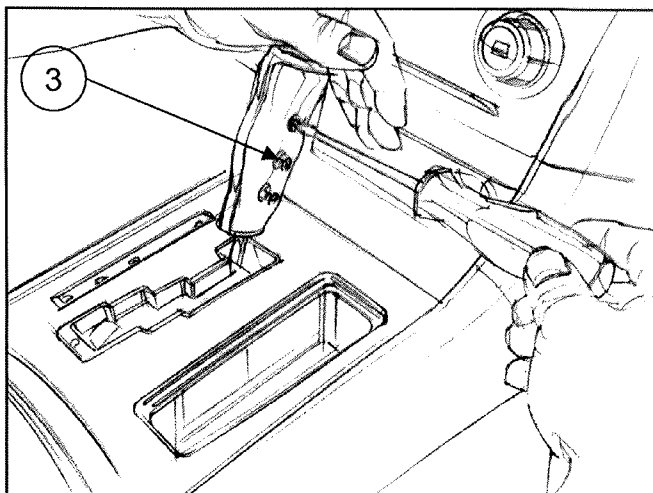

9) Installed Mopar Shifter

