




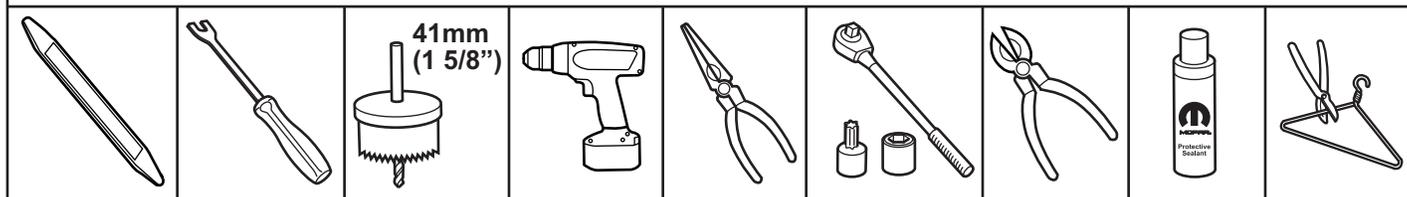








# TRAILER HARNESS







www.mopar.com






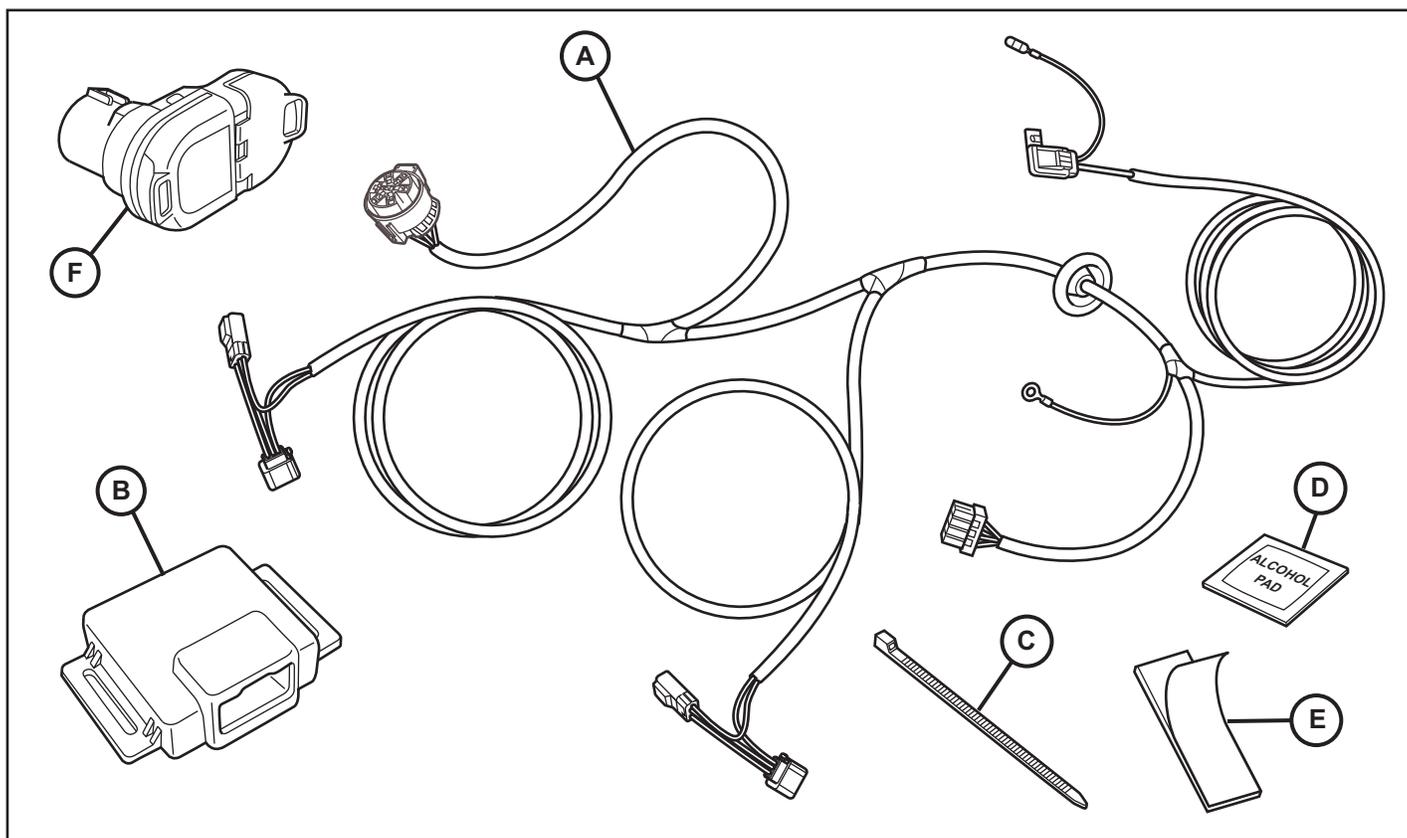







**NOTE: VEHICLE MUST BE EQUIPPED WITH TRAILER HITCH BEFORE PROCEEDING**






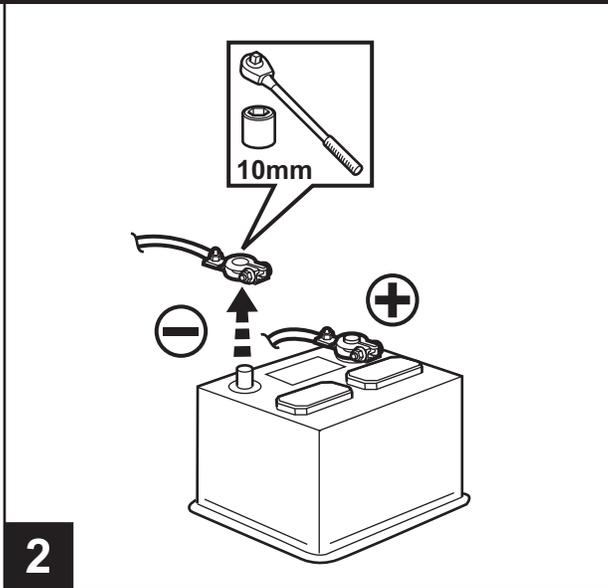
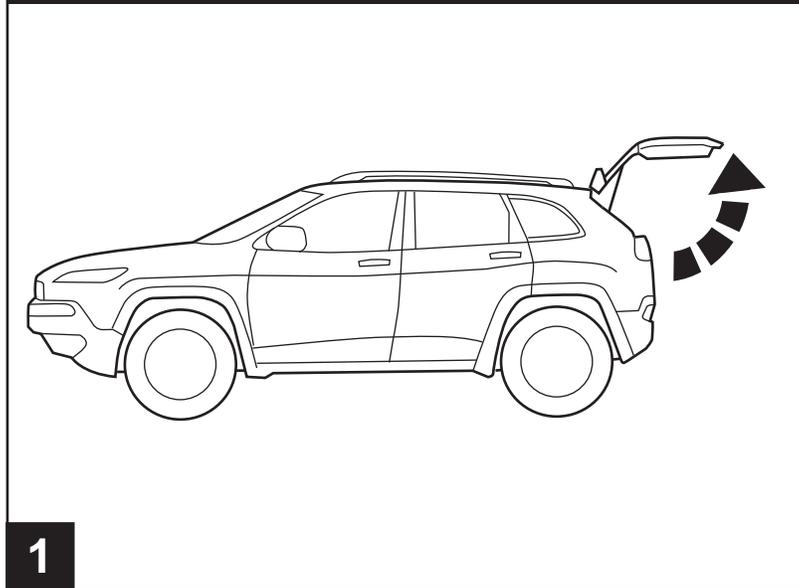


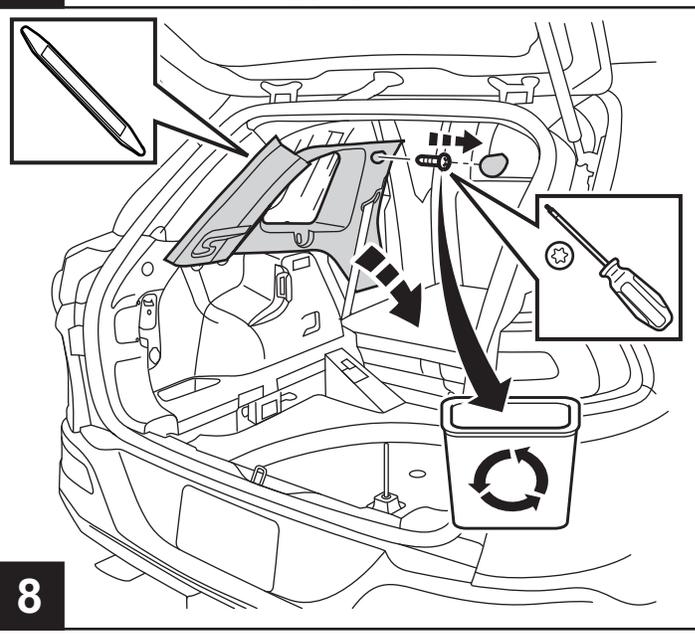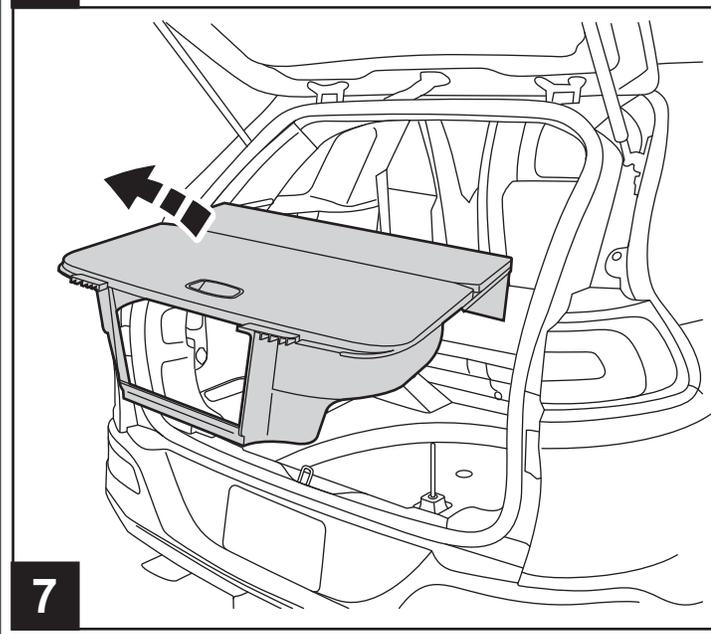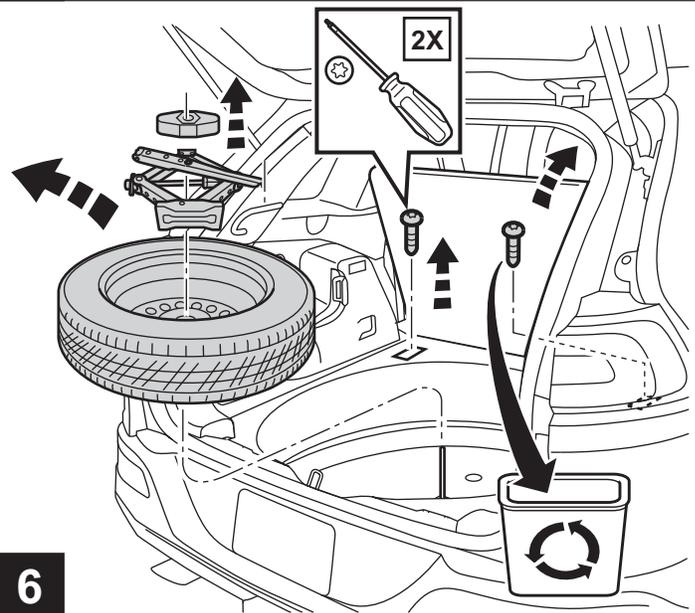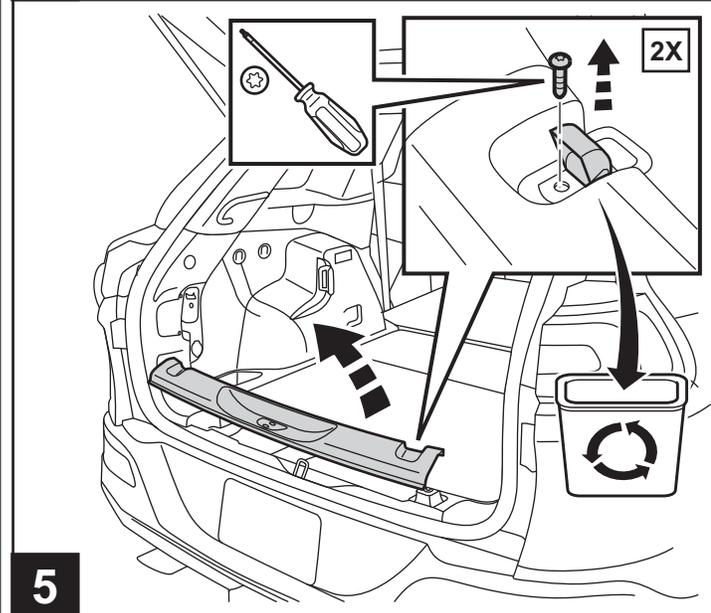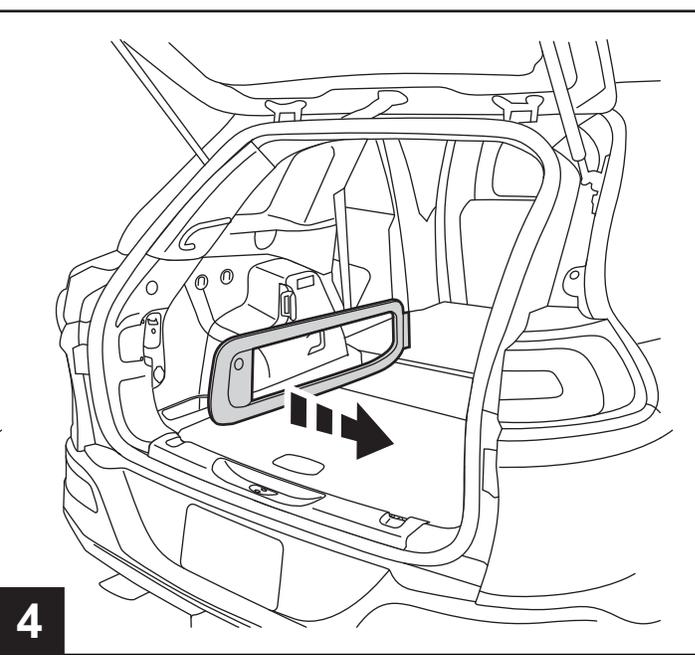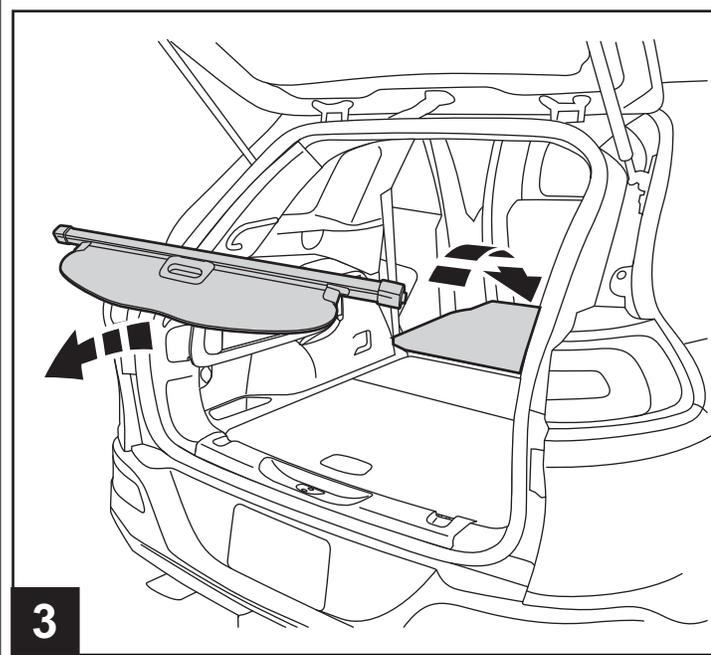


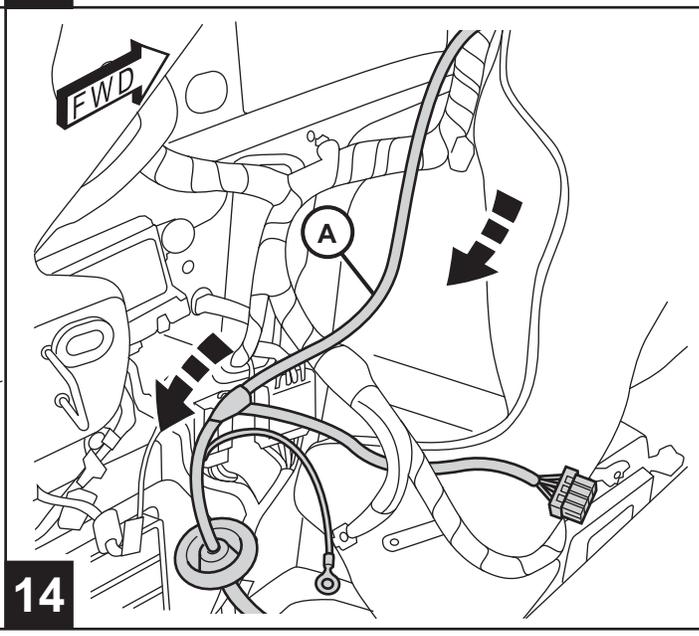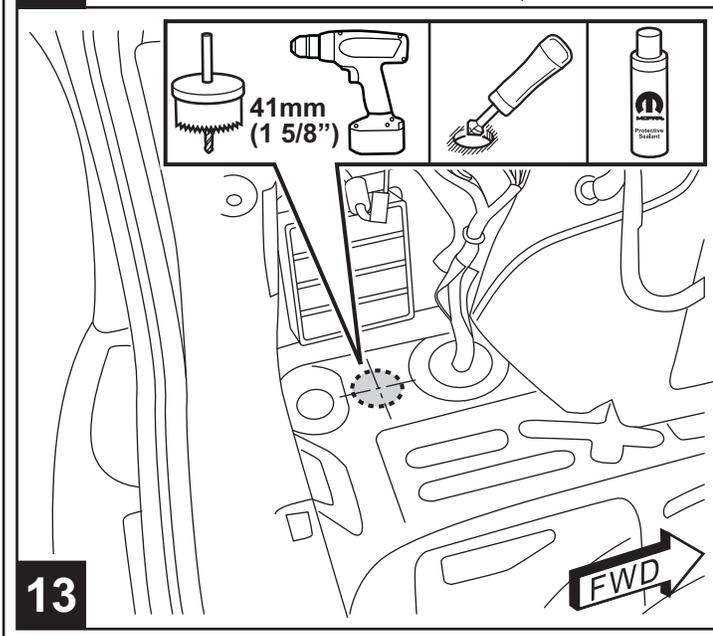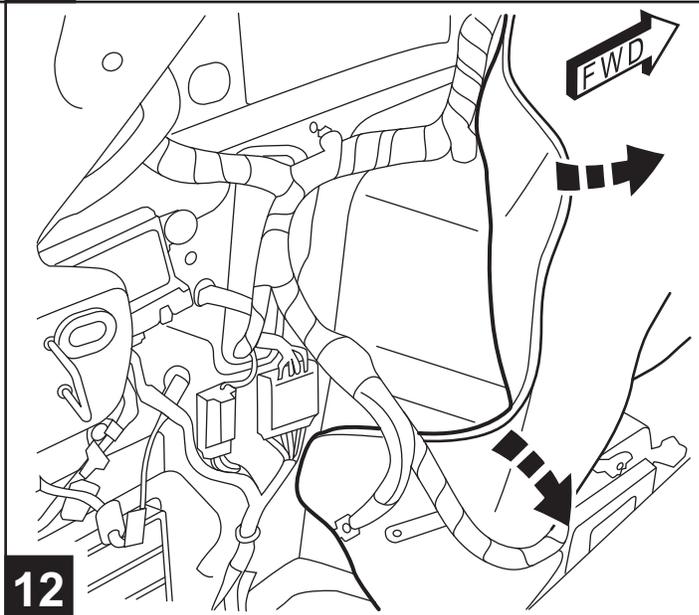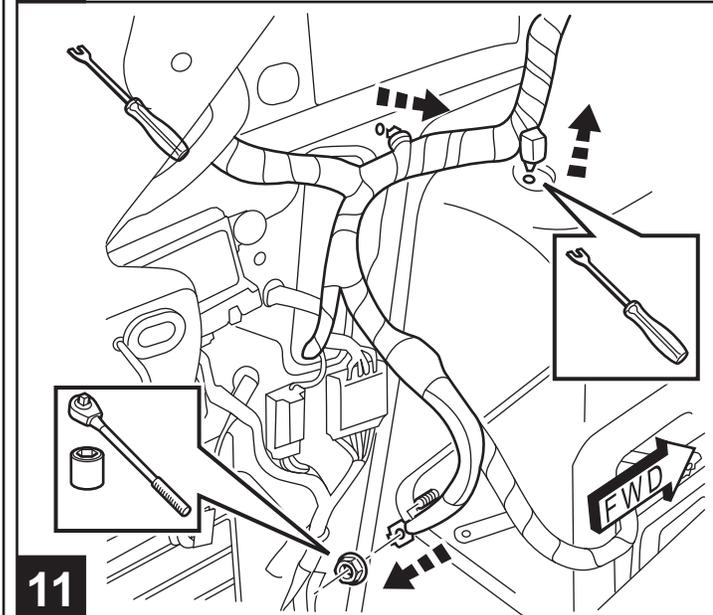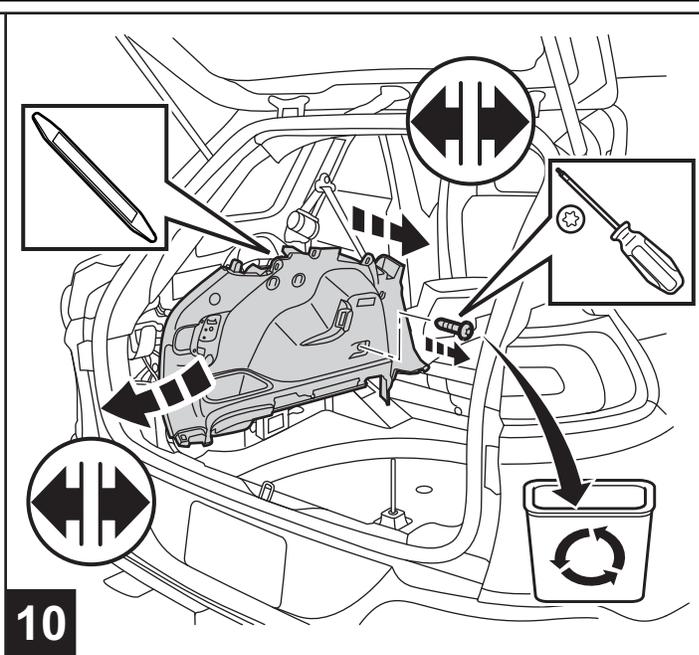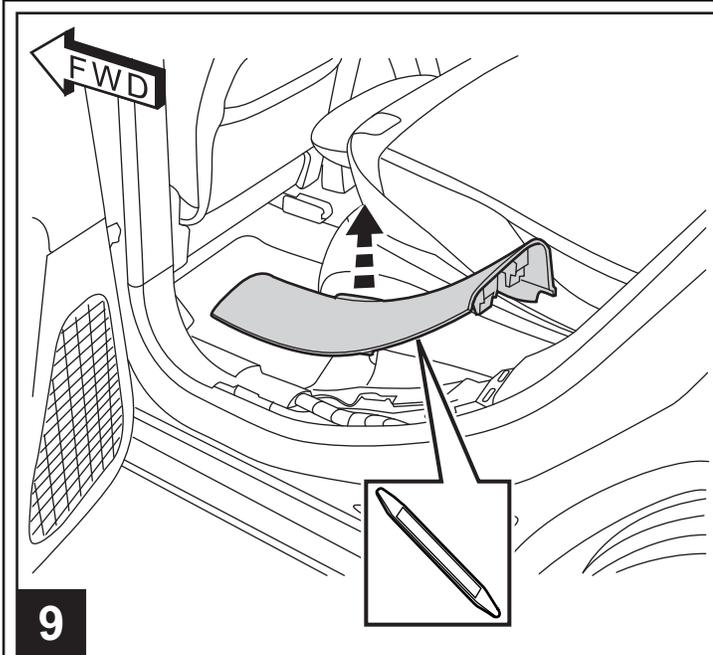

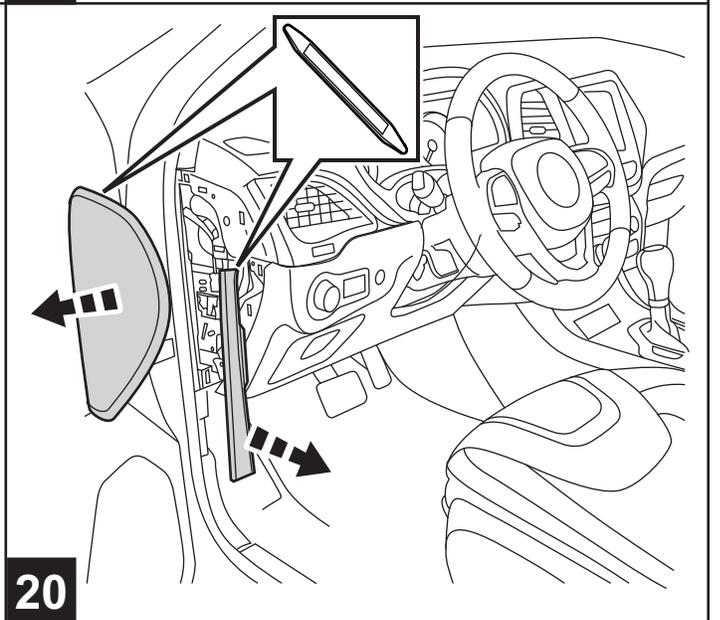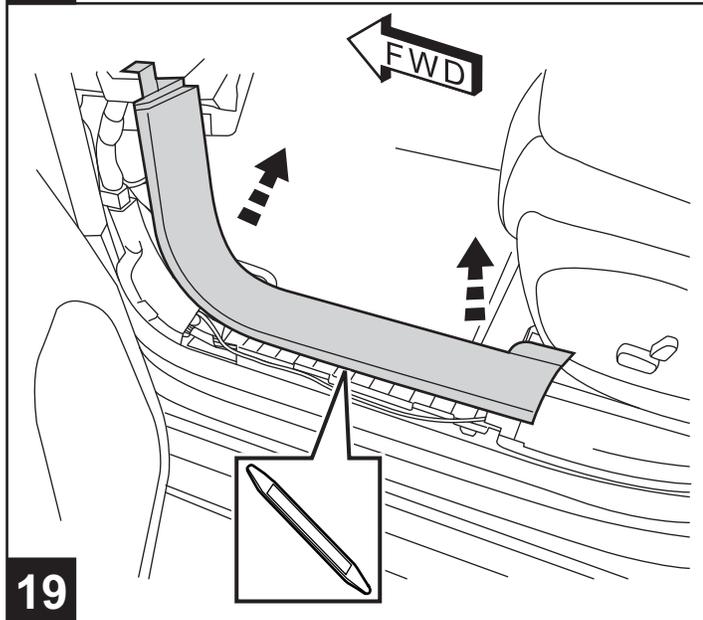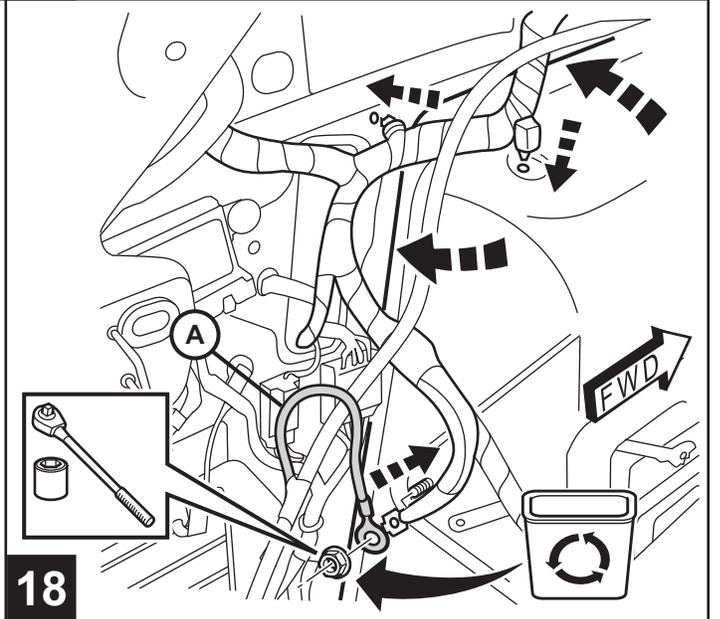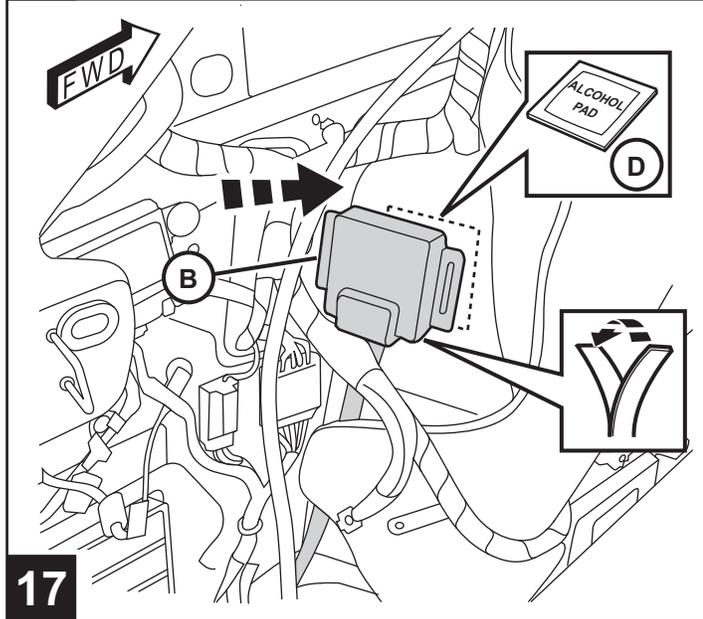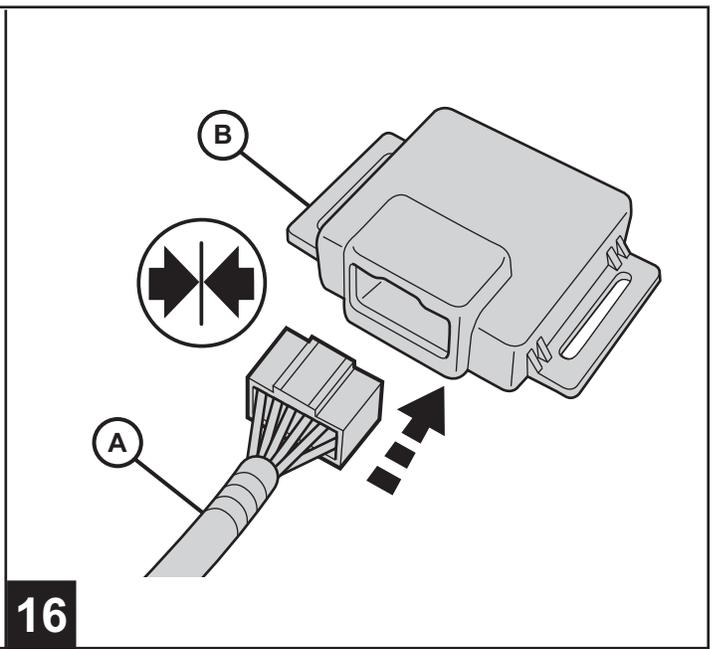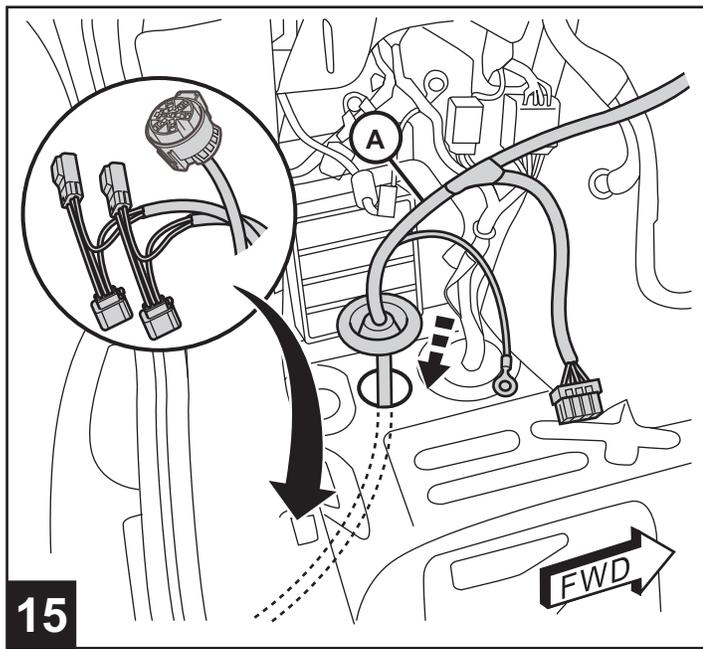


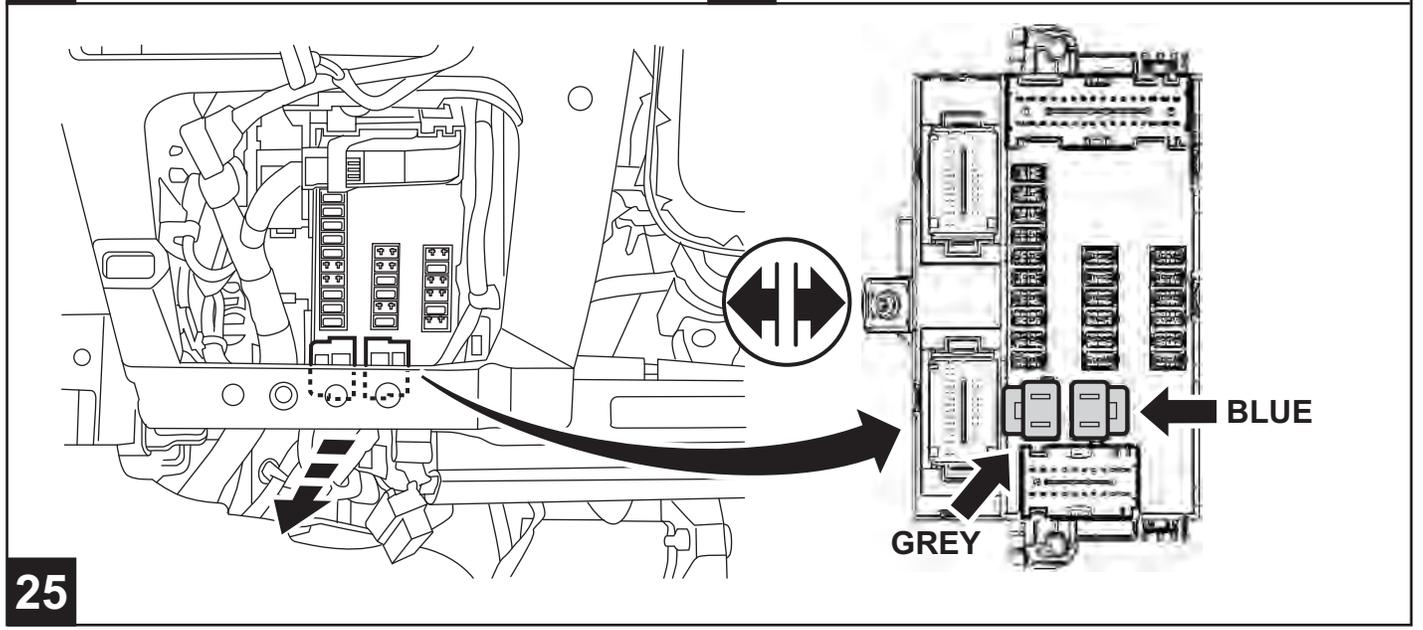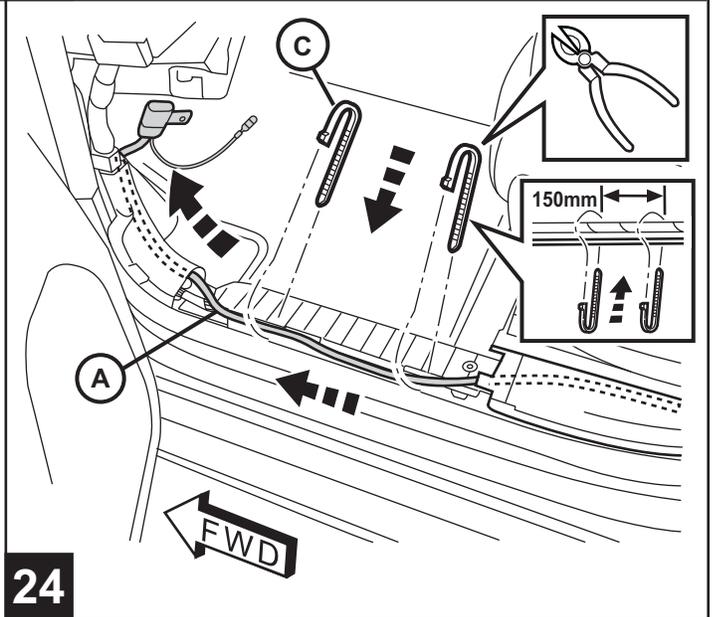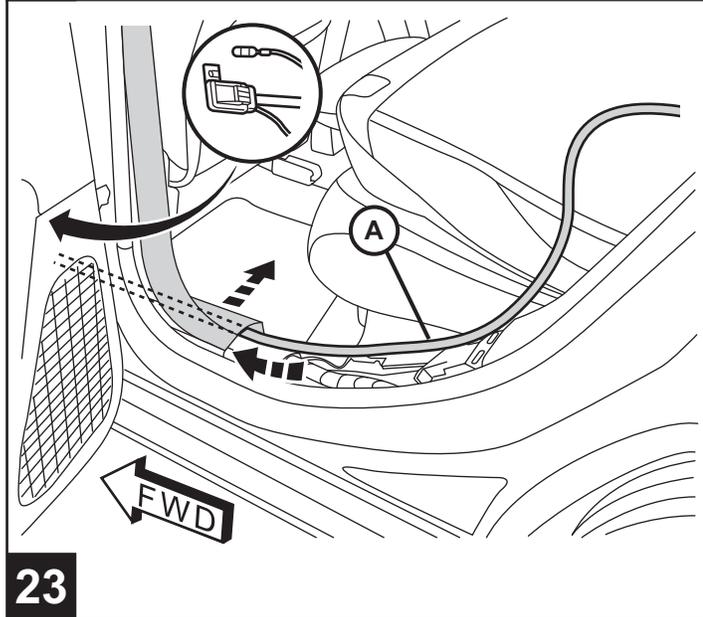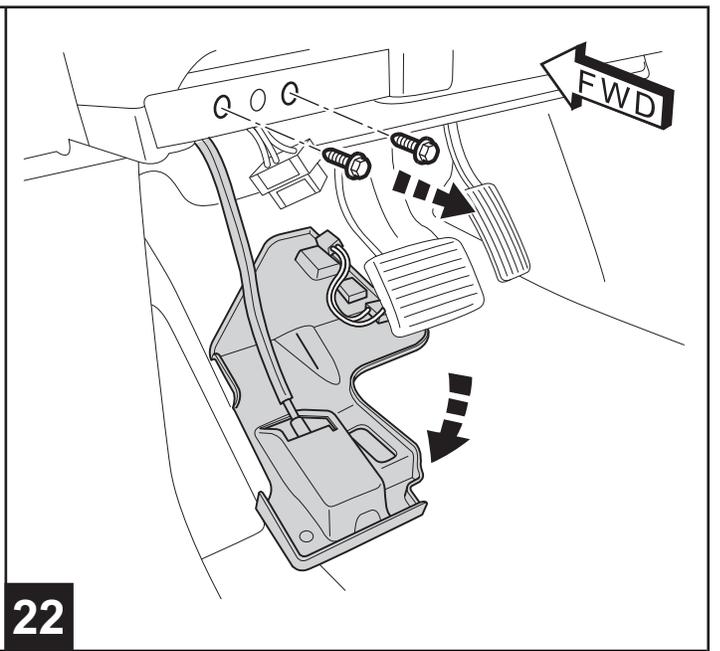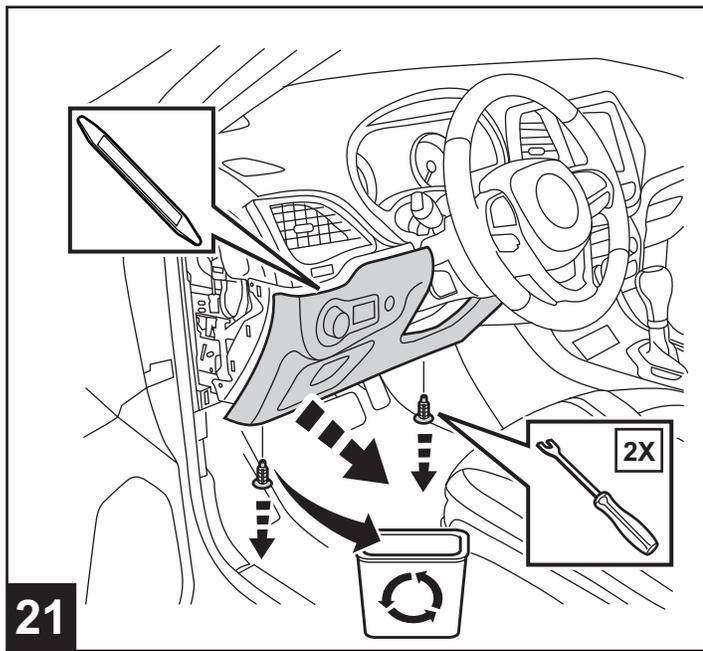

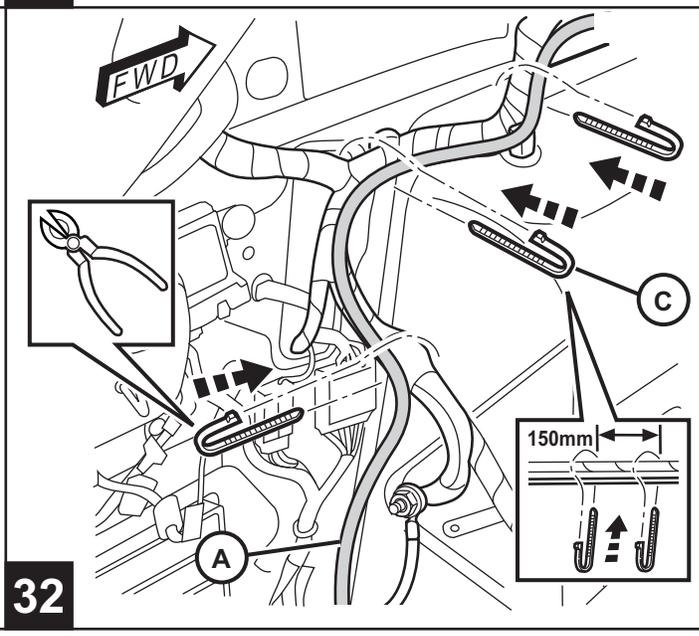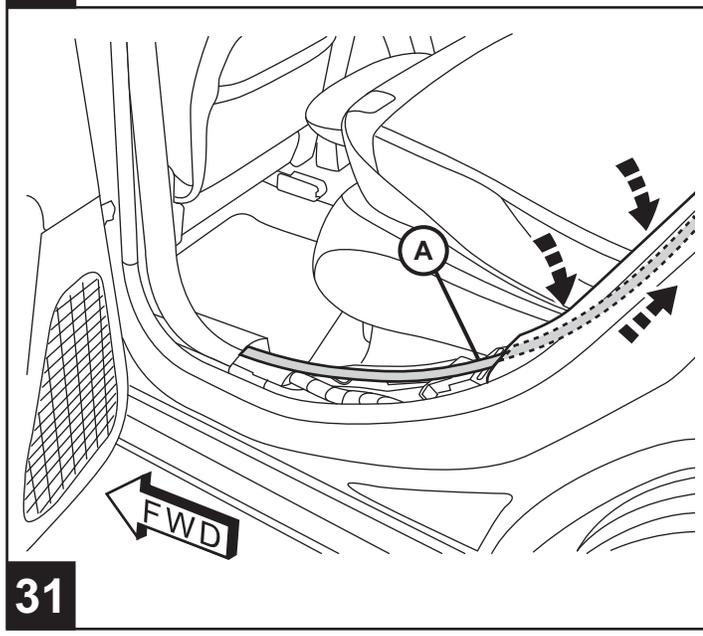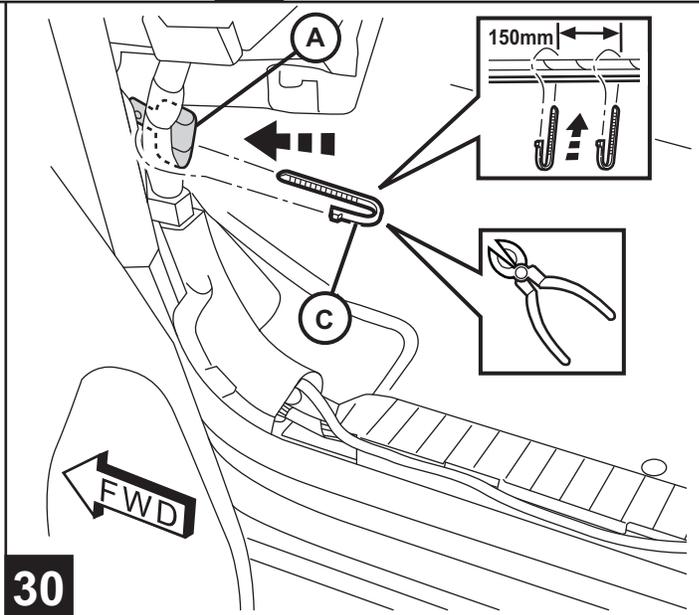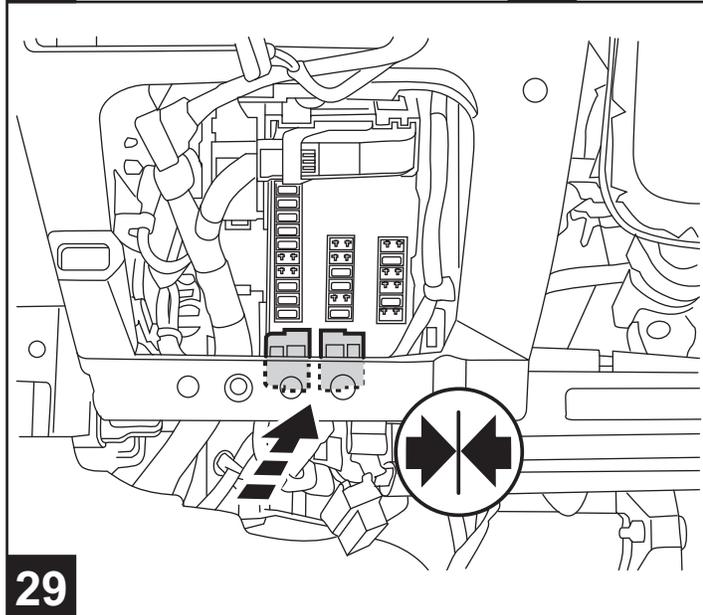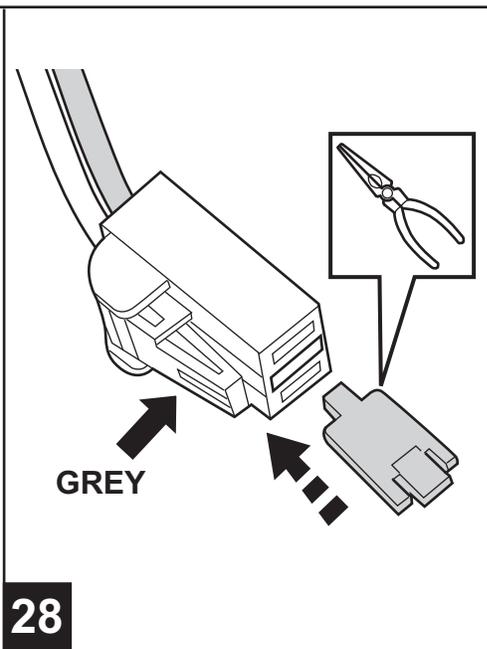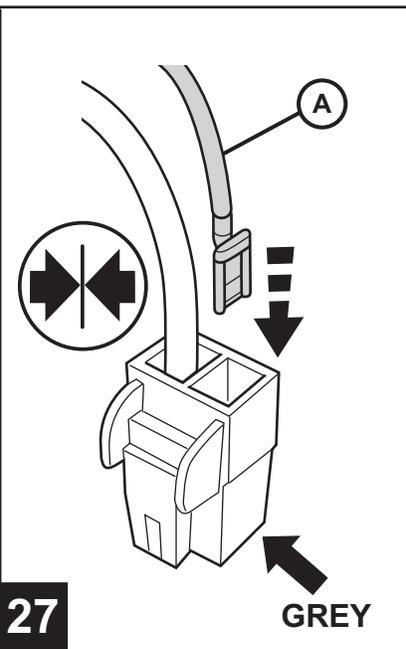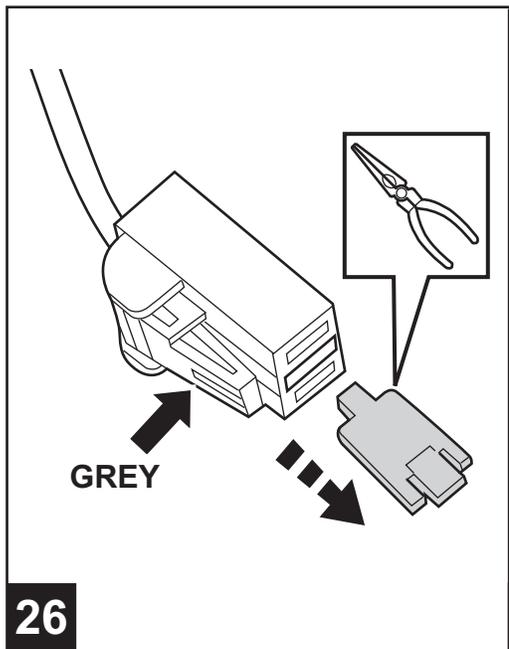

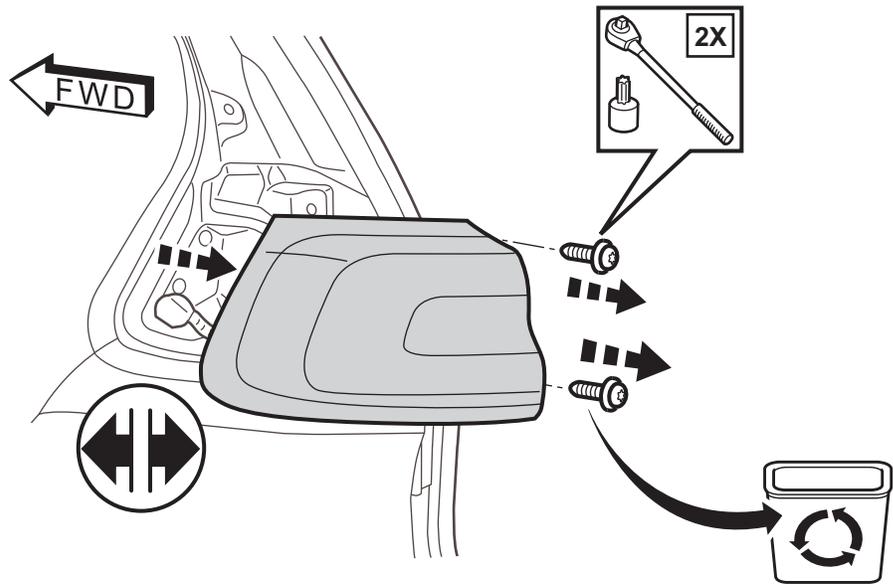

33

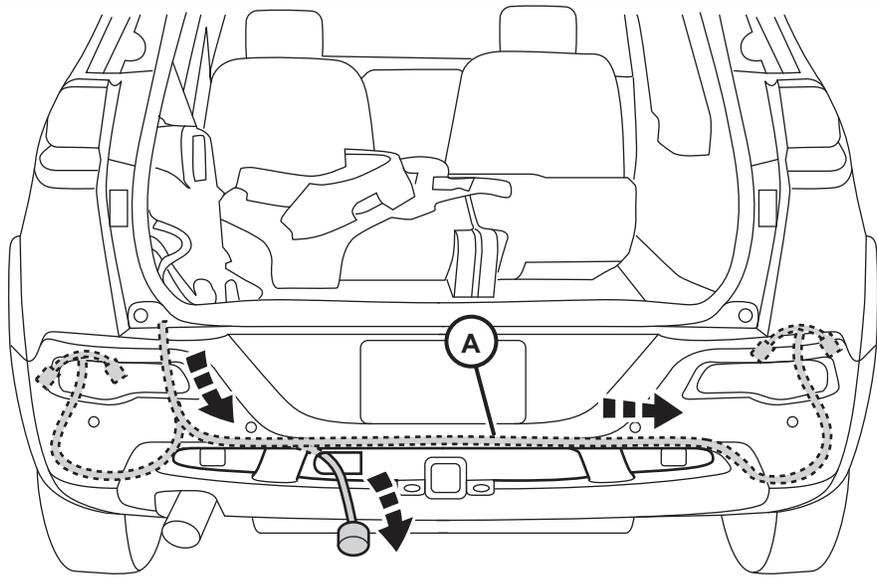

34

