









RAM WIRELESS PHONE CHARGER

RAM Chargeur de téléphone sans fil


RAM Cargador del teléfono inalámbrico

www.mopar.com

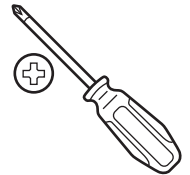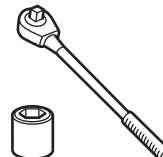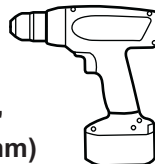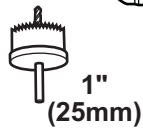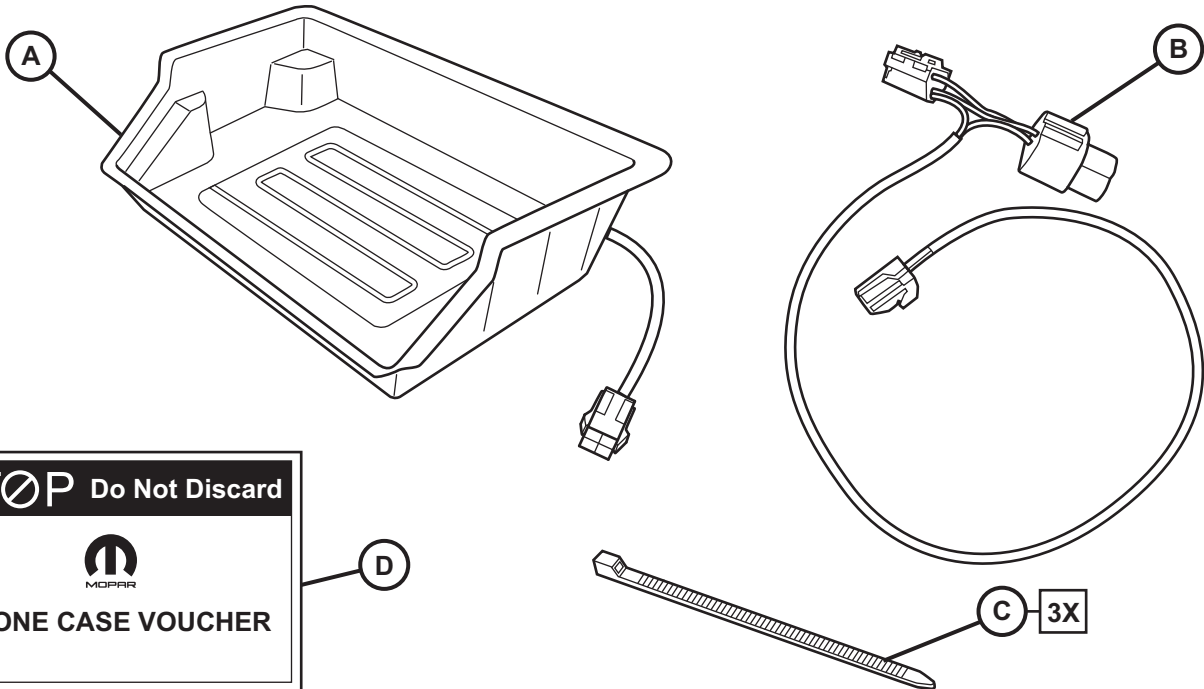


**RETAIN ALL FASTENERS
FOR REINSTALLATION**

Maintenir toutes les vis pour la réinstallation
Mantenga todos los tornillos para la reinstalación





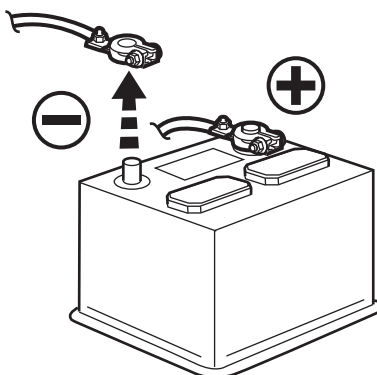



1

FWD →

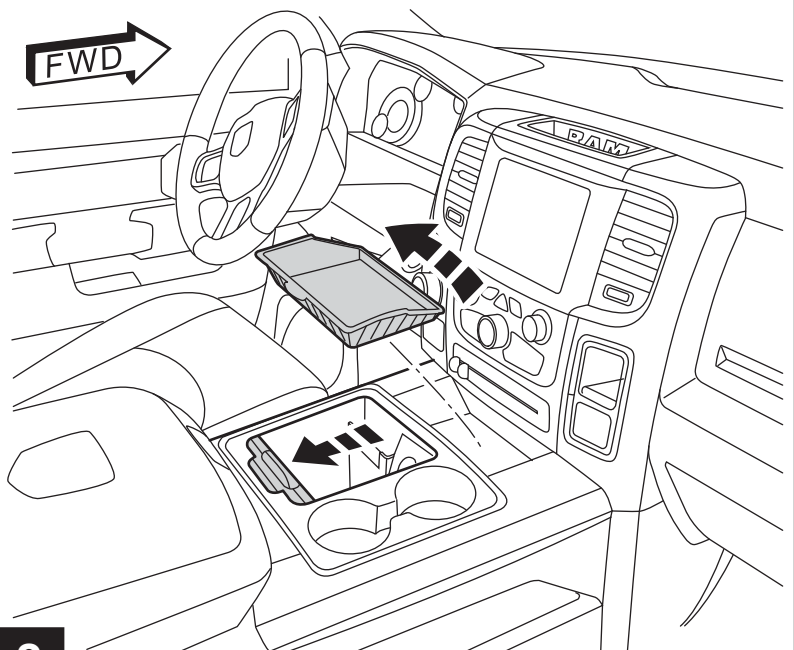


2

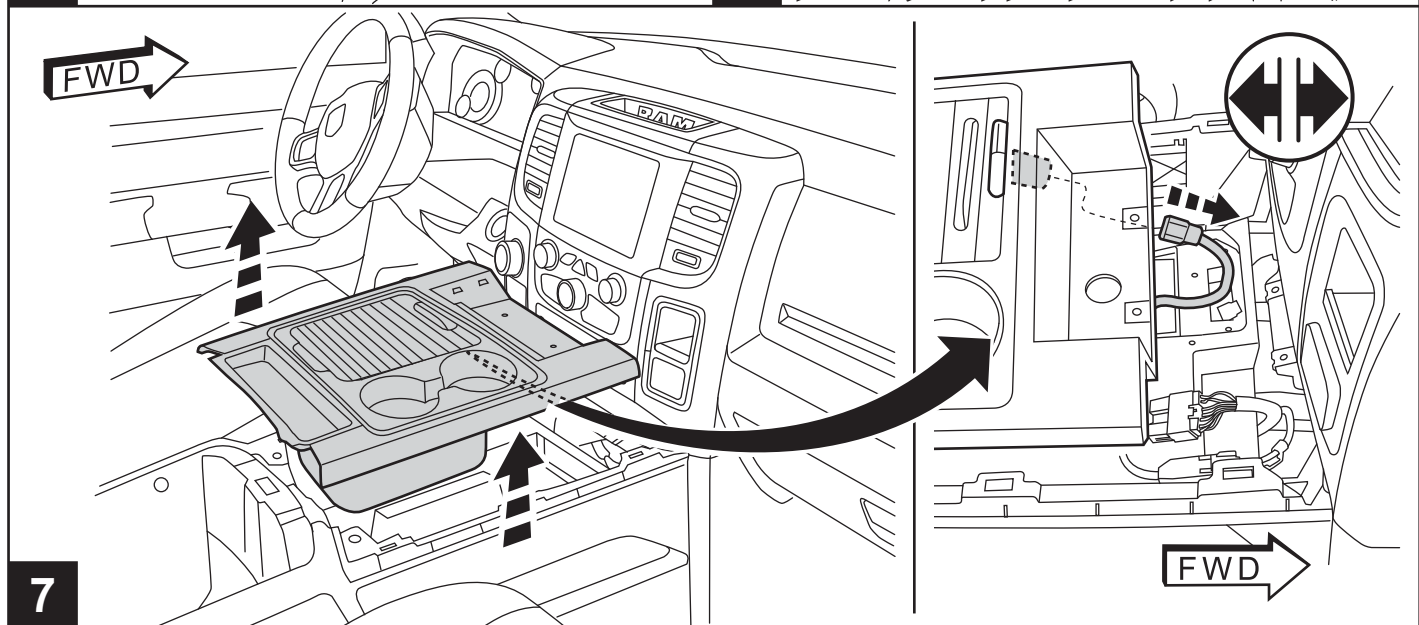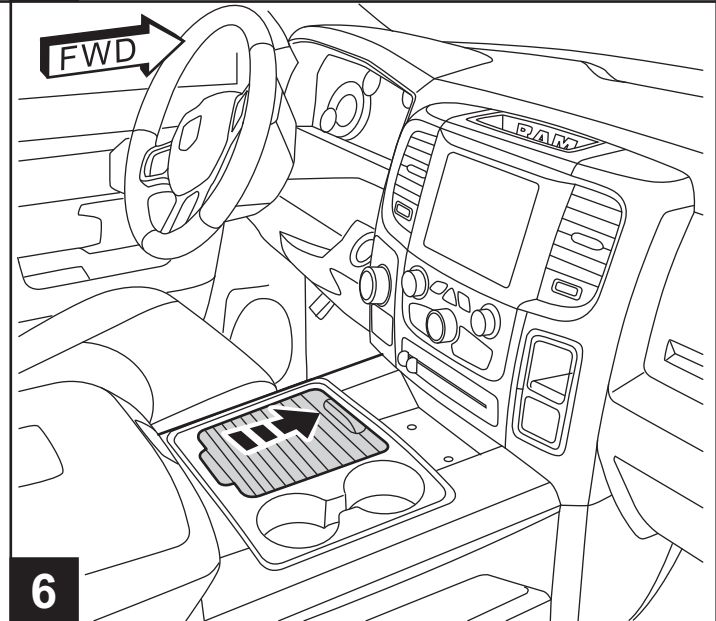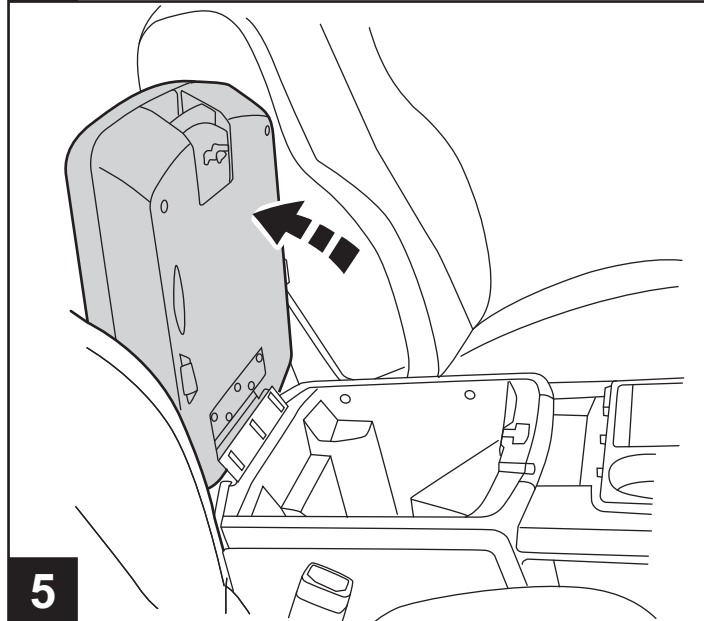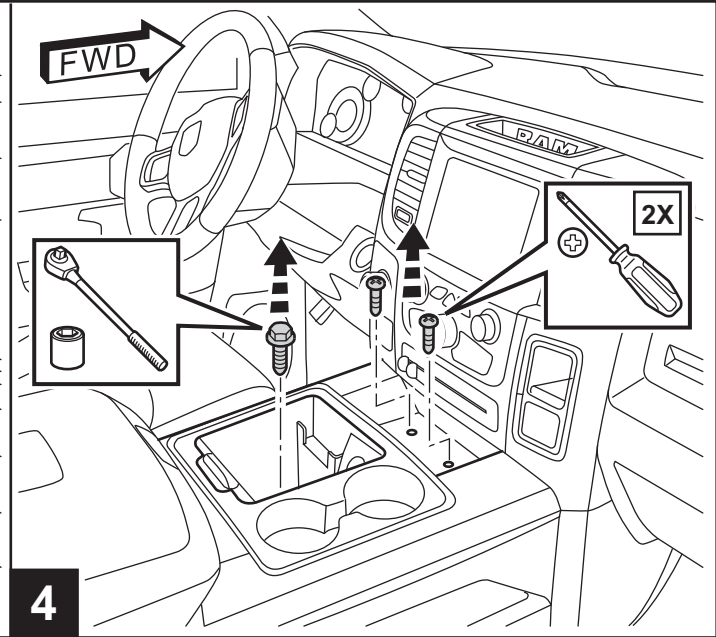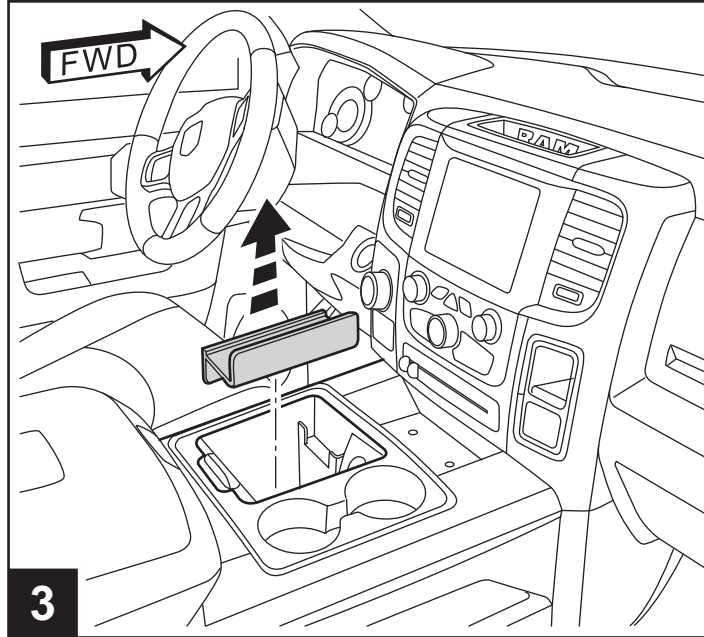


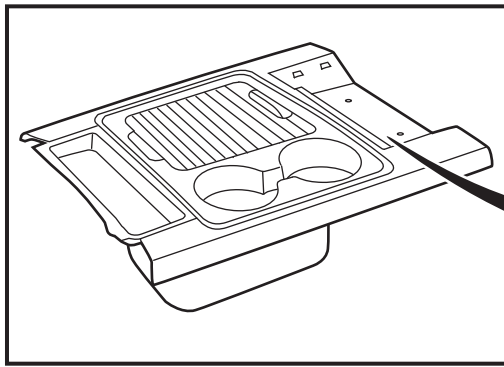**TRIM OUT TEMPLATE**

Découper le gabarit
Recortar guía de papel

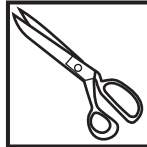


FWD

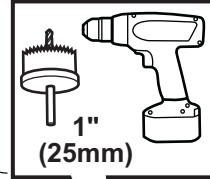**DISCARD TEMPLATE AFTER DRILLING AND CLEAN HOLE**


Retirer le gabarit et nettoyer le trou
Retire la plantilla y limpiar el orificio




8

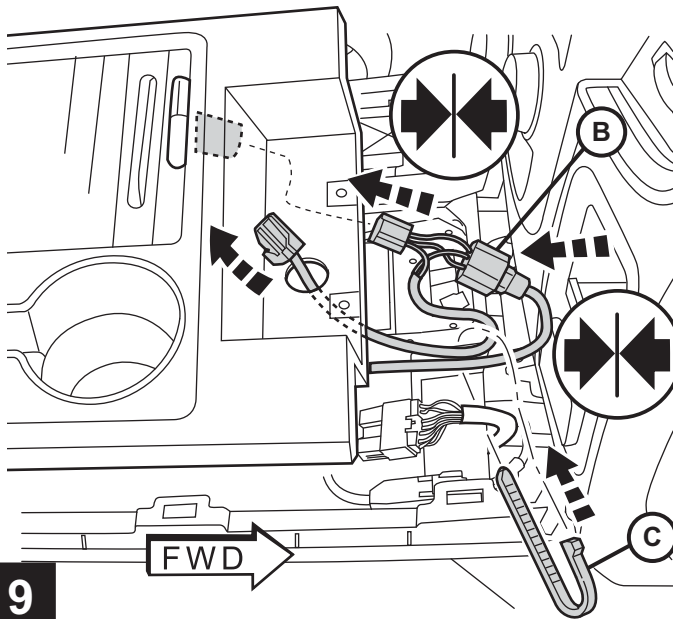


9

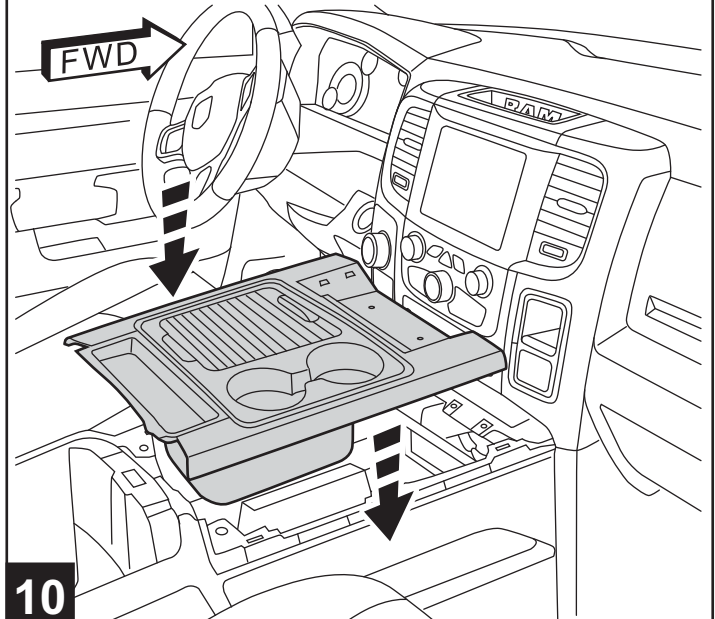



10

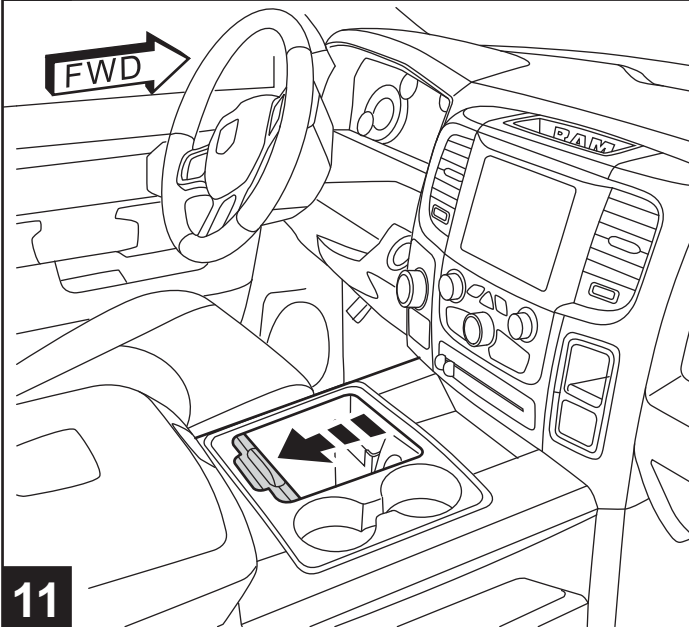

11

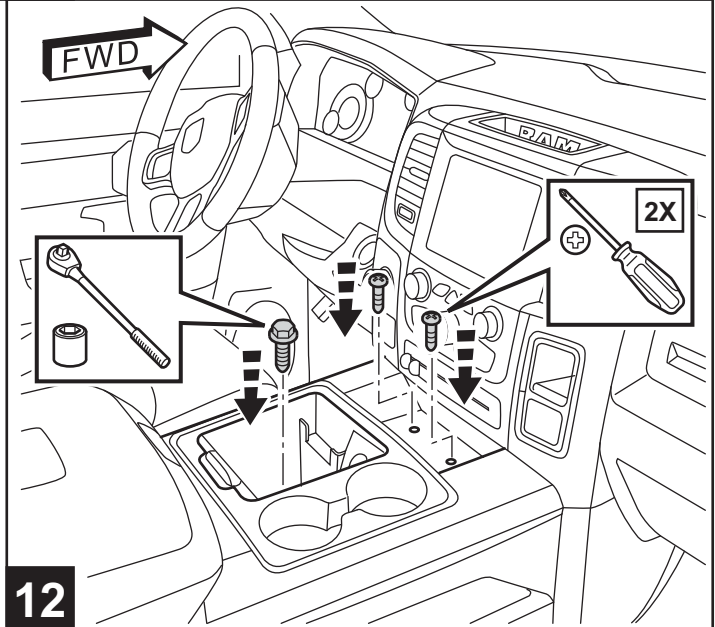

12

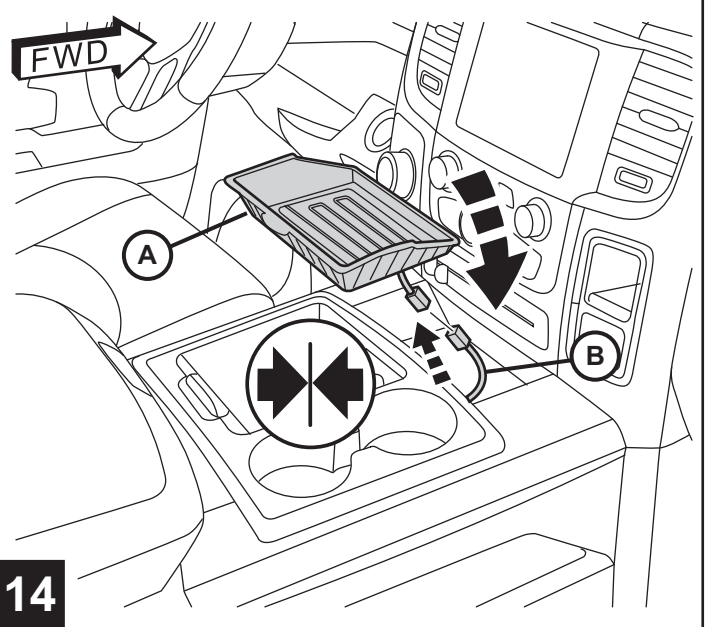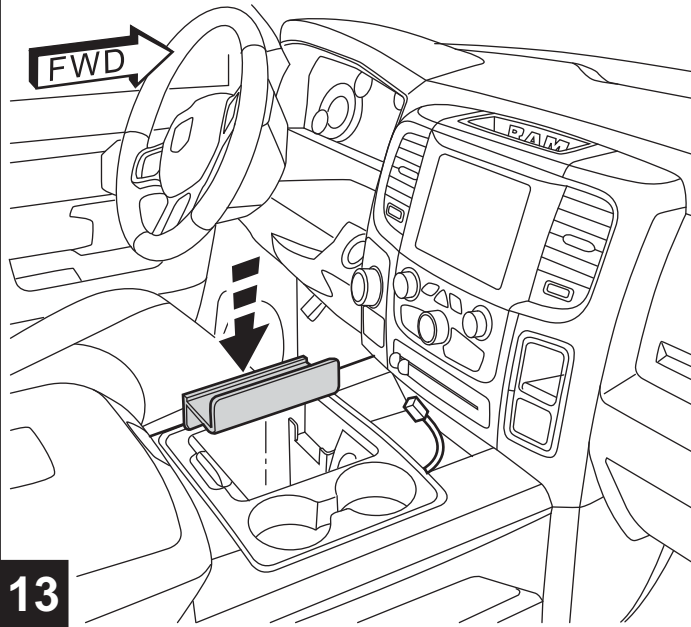


**GIVE PHONE CASE VOUCHER (D)
TO CUSTOMER**

Donnez la carte de téléphone (D) au client

Dé la bono tarjeta (D) al cliente

15

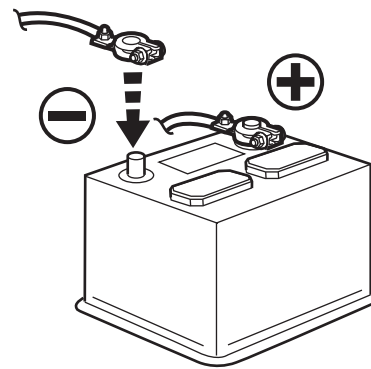

16

TEMPLATE GABARIT PLANTILLA

