


## **Spare Tire**

FIAT 500

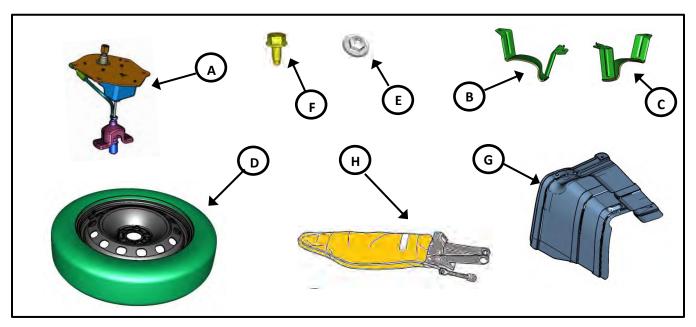

CALL OUT	DESCRIPTION	QUANTITY
Α	Winch	1
В	Left Bracket	1
С	Right Bracket	1
D	Spare Tire	1

CALL OUT	DESCRIPTION	QUANTITY
E	Stamped Nut	4
F	M8 Bolt	8
G	Heat Shield	1
Н	Jack Kit Bag	1


TOOLS REQUIRED		
Socket Wrench	13 mm Socket	

## **SPARE TIRE**


1. Mounting Location




- 2. Open rear hatch. Locate winch access hole, remove and discard the plug.
- 3. Raise the vehicle at this time.

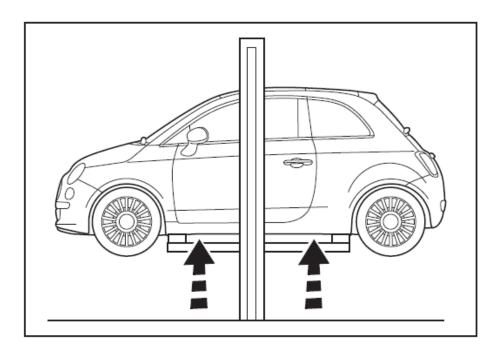


4. Position winch assembly in place under vehicle. Fasten with four M8 bolts (F) and tighten to 24 Nm.

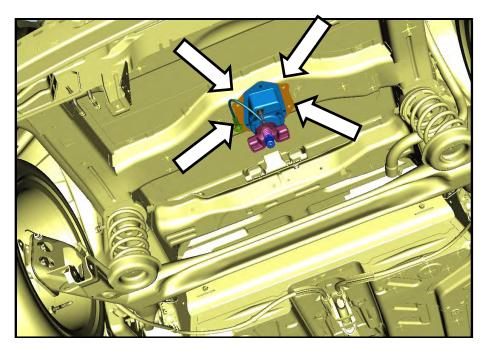

5. Position the Left and Right Hand Brackets (B, C). Fasten with two M8 bolts (F) each, then torque to 20 Nm.

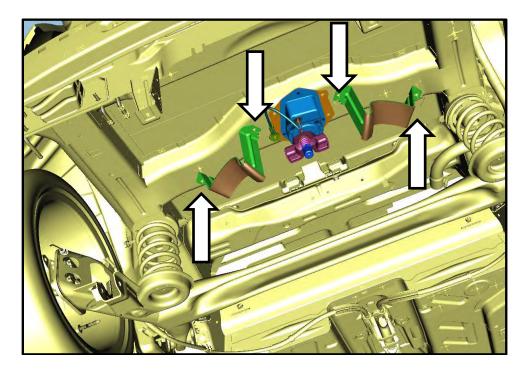

6. Position the heat shield then install four Stamped Nuts (E).

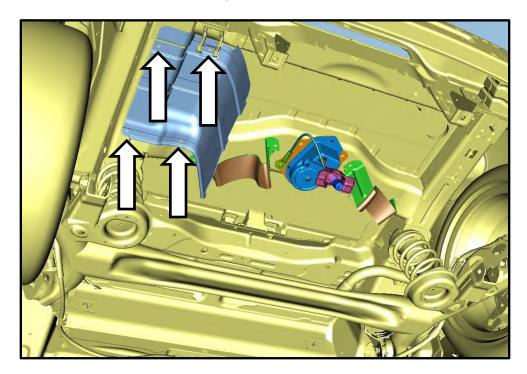

- 7. Lower vehicle far enough to reach inside the rear hatch area. Use the wrench provided in the Jack Kit Bag (H) to extend the winch cable.
- 8. Lift the spare tire into position with stem sided down. Slide the retaining shoe through the center hole.

- 9. Use the tire wrench to retract the winch and raise the spare tire.
- 10. Verify that the spare tire is securely positioned under the vehicle and properly aligned inside the left and right brackets. If necessary, raise the vehicle again to complete this step.
- 11. Lower vehicle to the ground.
- 12. Re-install the load floor panel and stow the Jack Kit Bag (H).