

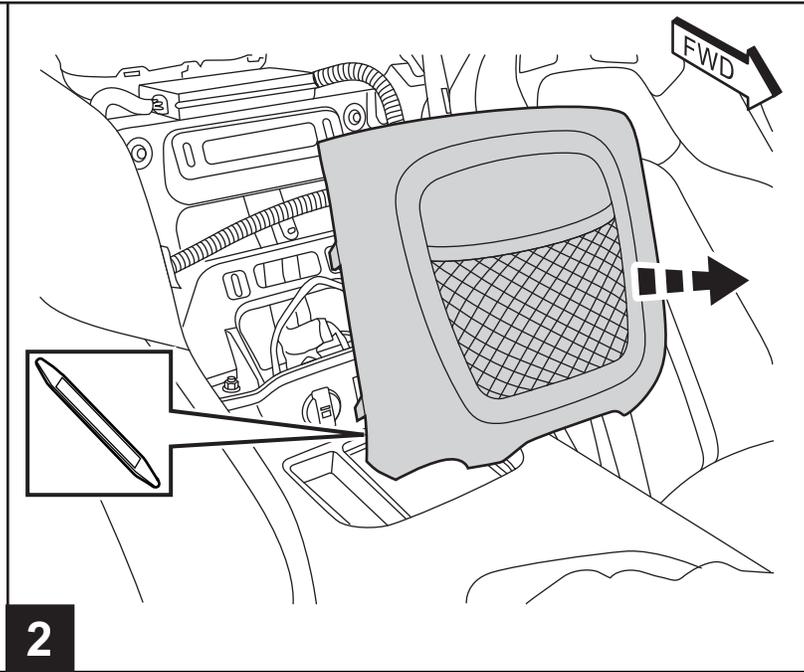
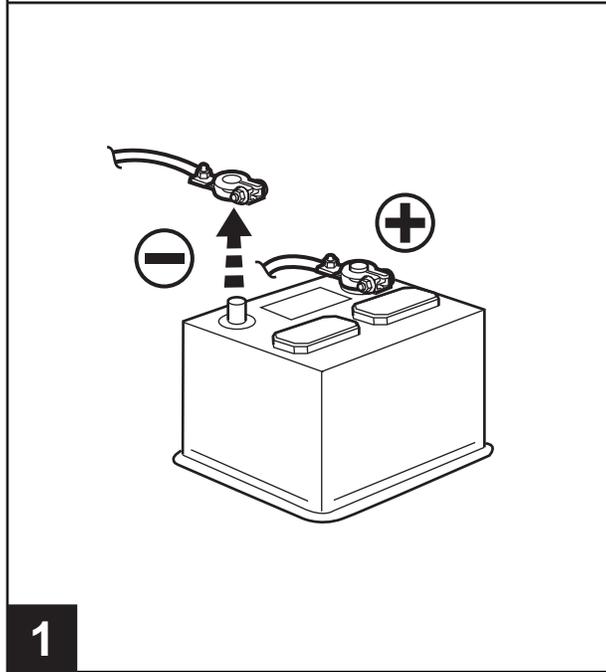







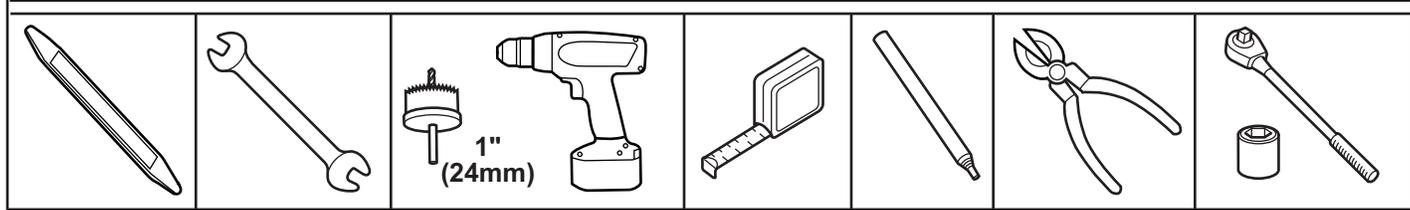






WIRELESS PHONE CHARGER






Chargeur de téléphone sans fil
Cargador del teléfono inalámbrico

www.mopar.com

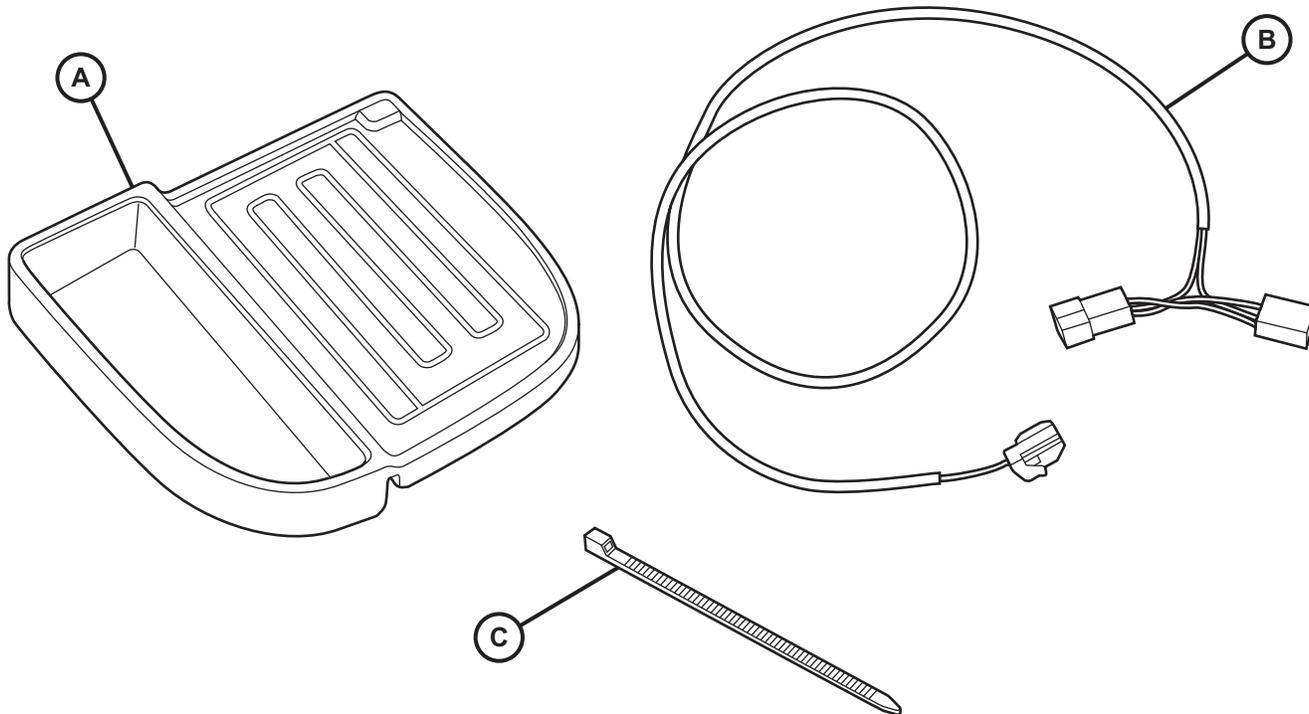

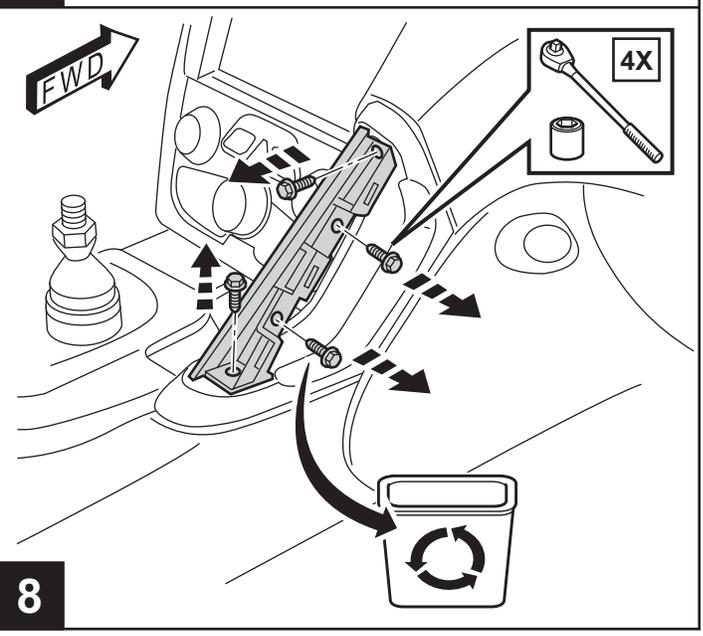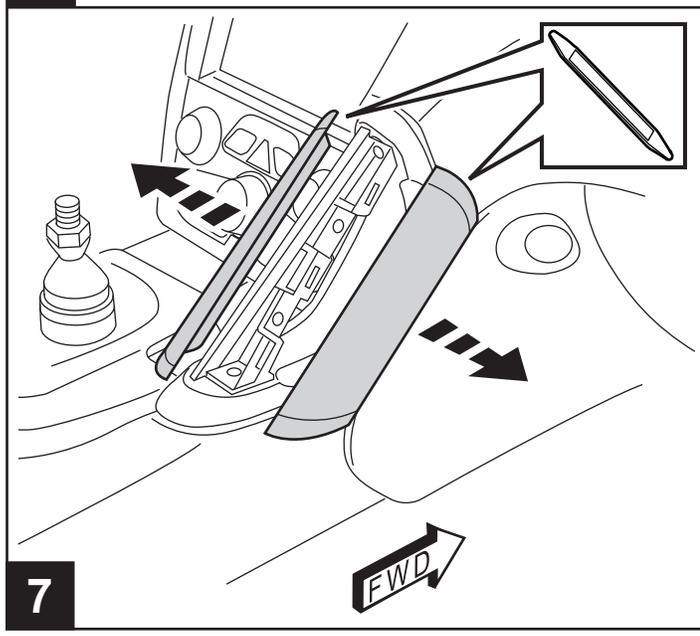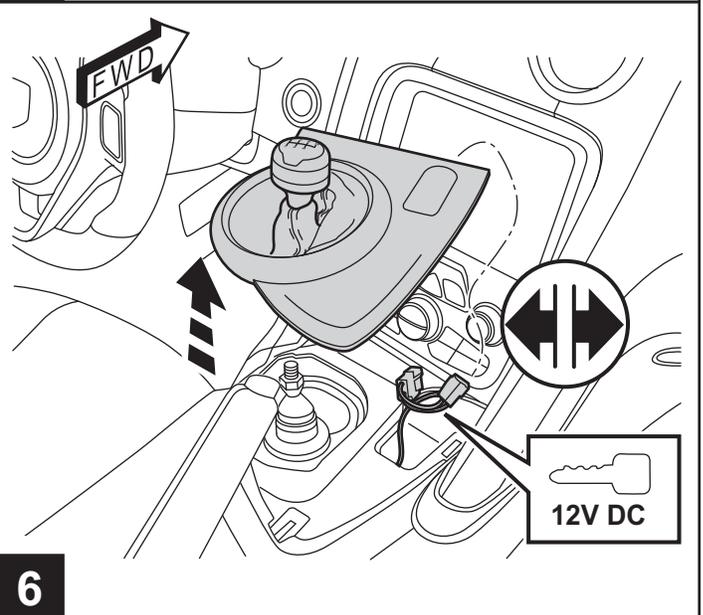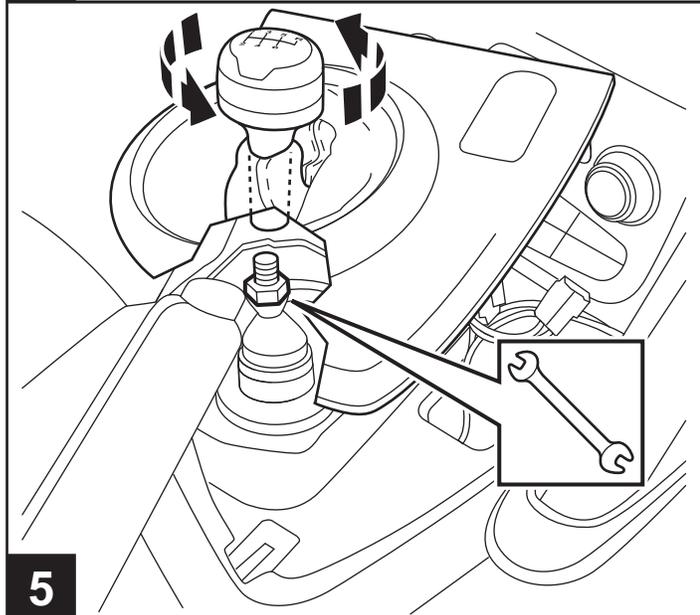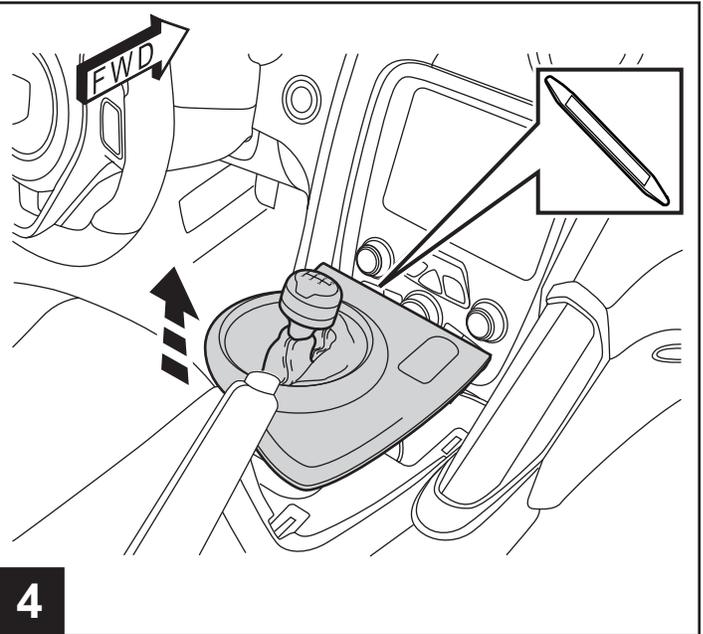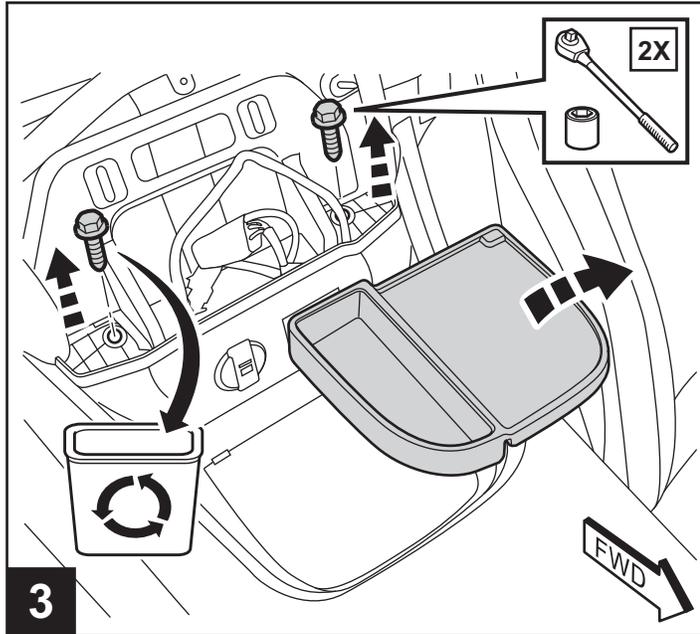

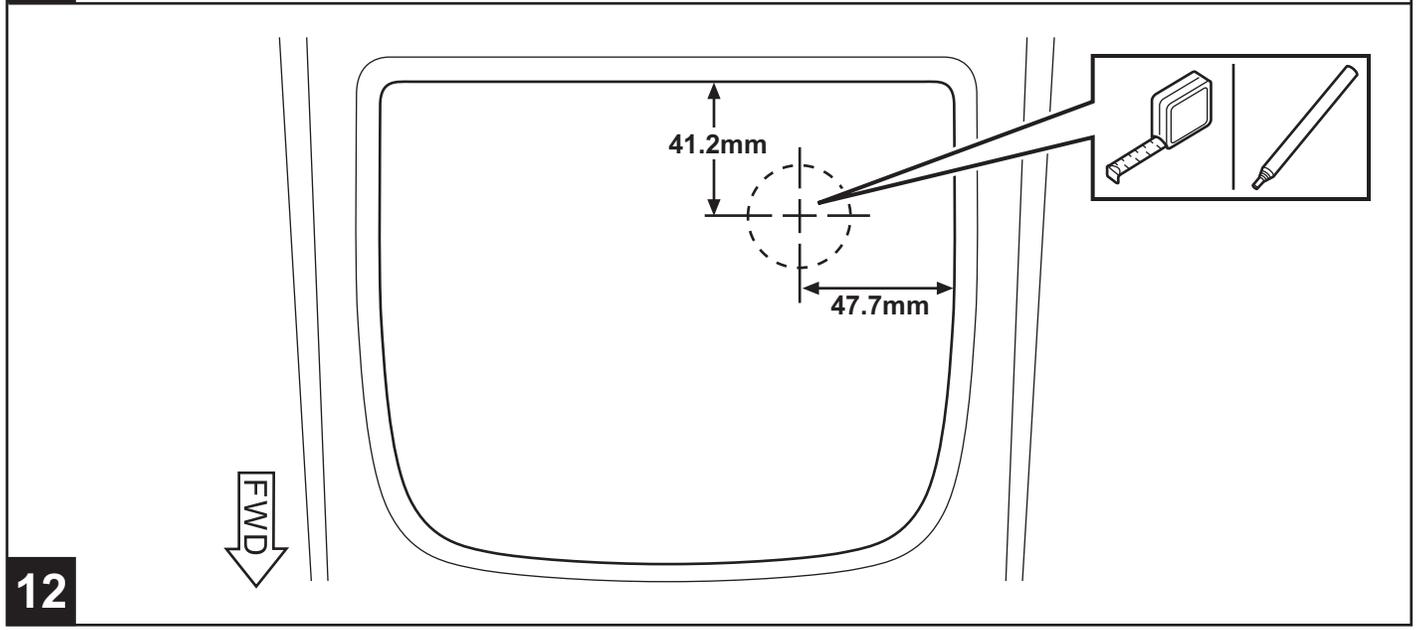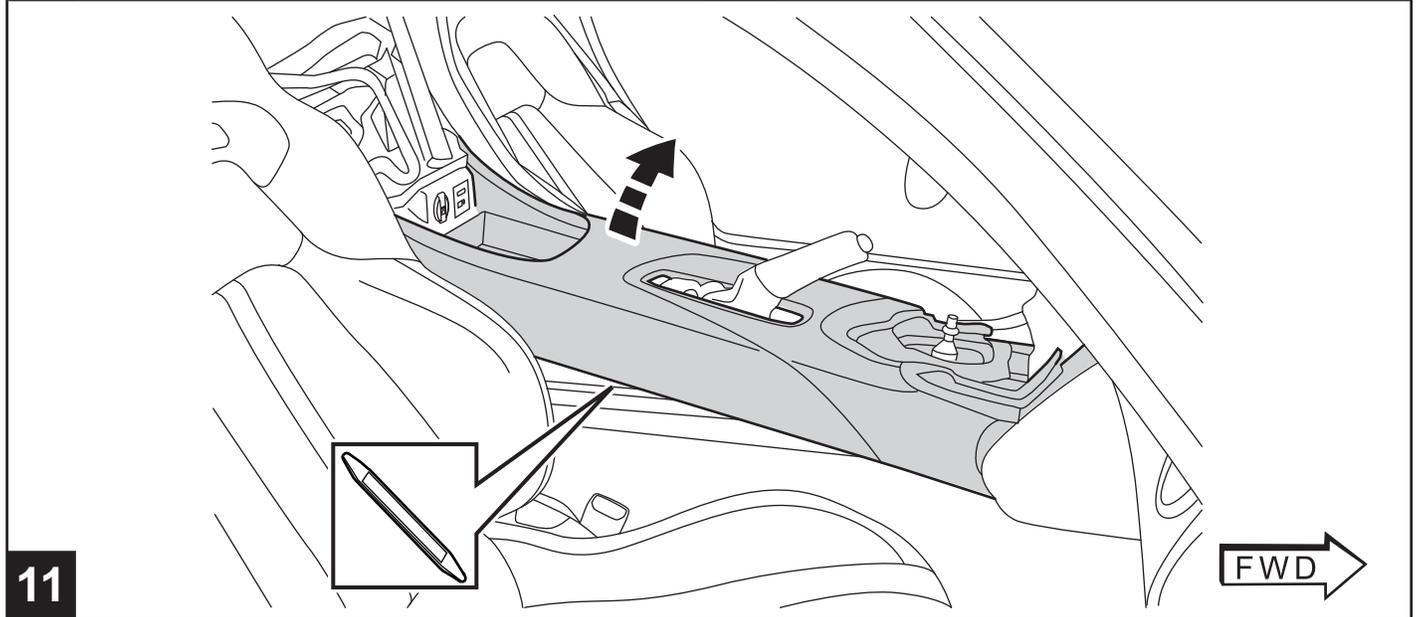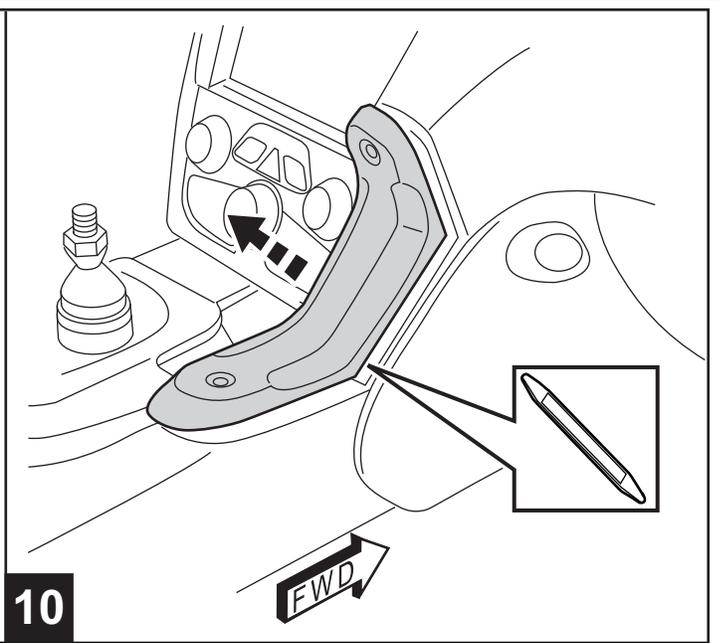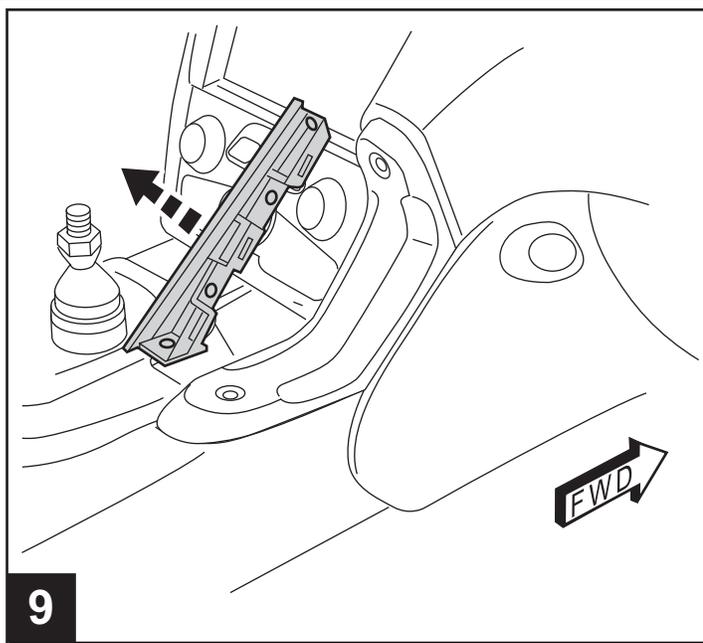


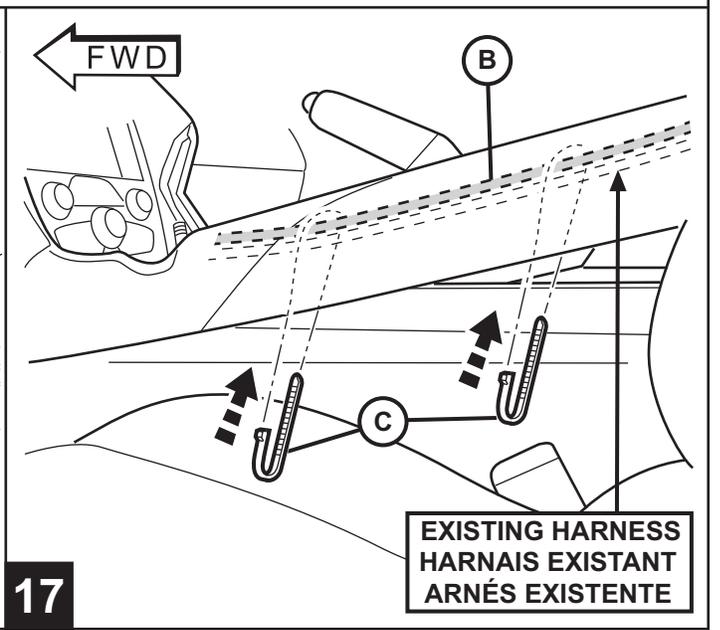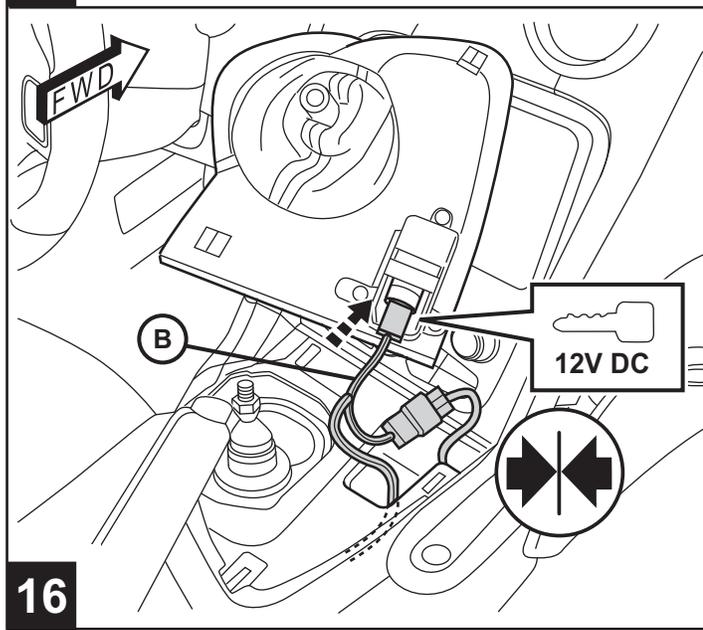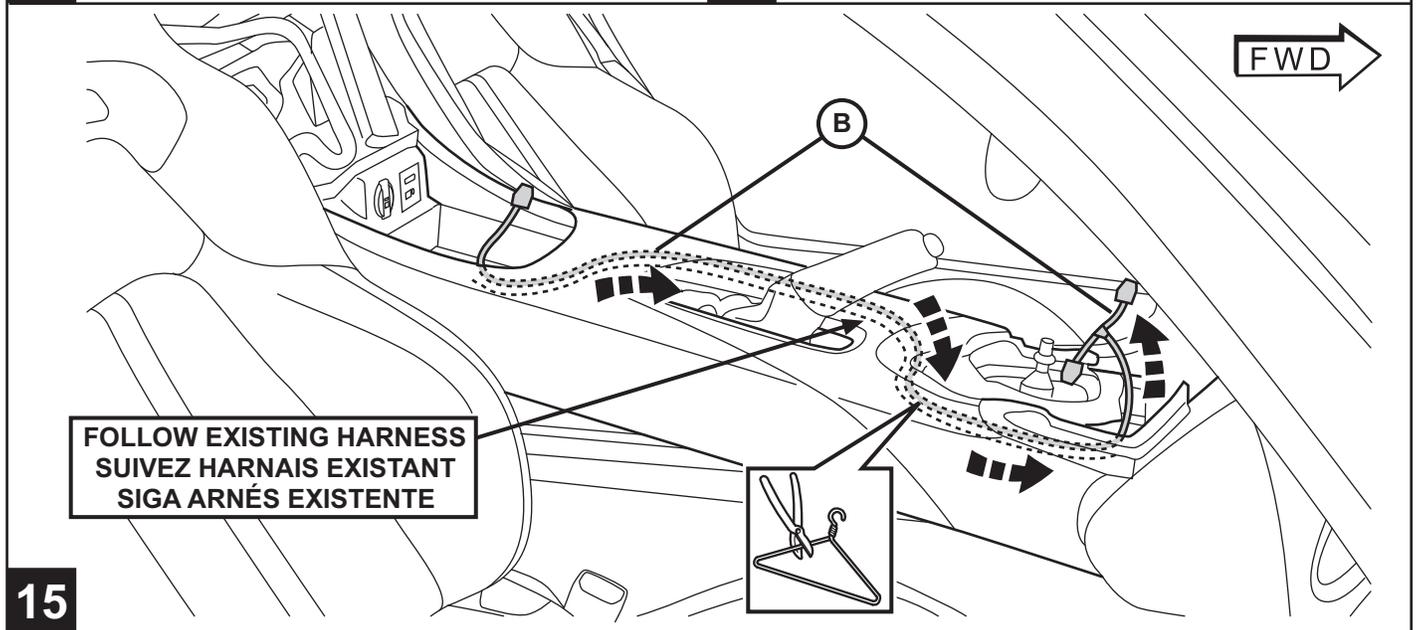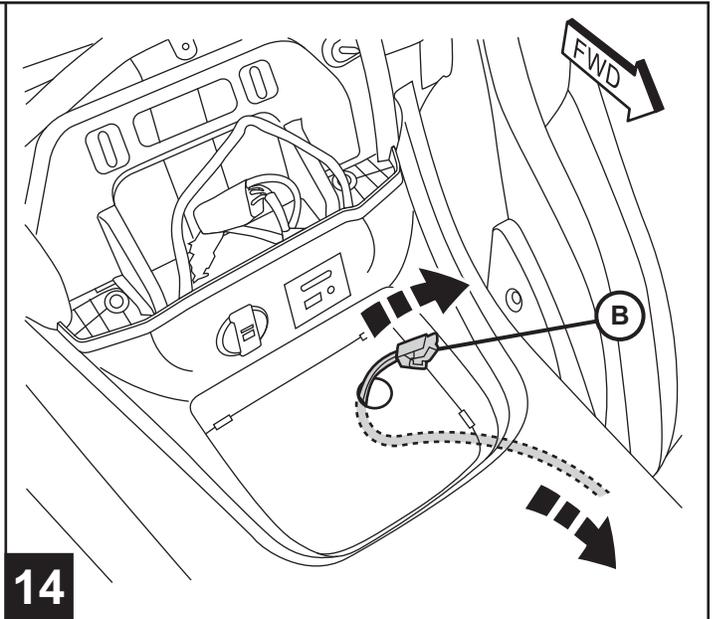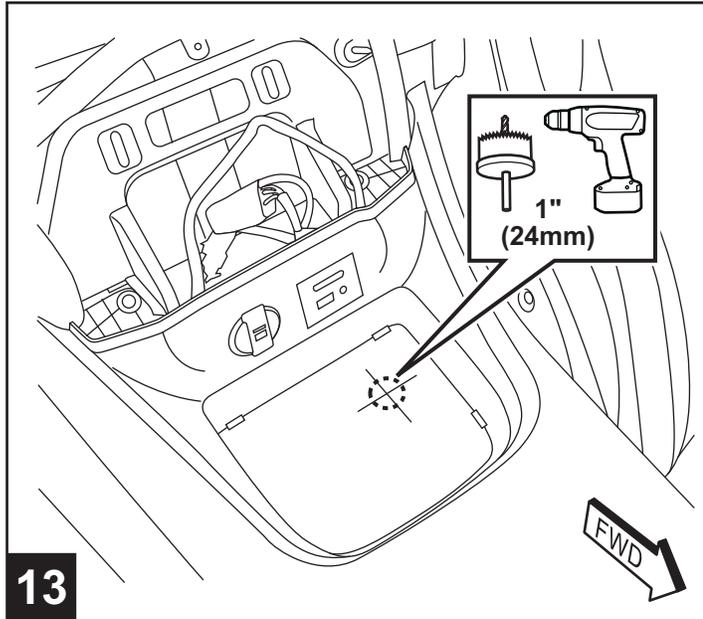

**REVERSE STEPS 4 THROUGH 11
TO REINSTALL ALL TRIM PANELS
AND OTHER BODY COMPONENTS.**


**Pour reposer les panneaux de garniture
et composants, inversez les
étapes 4 à 11.**

**Invierta los pasos del 4 a través de 11 según
sea necesario para instalar los paneles
y los componentes.**

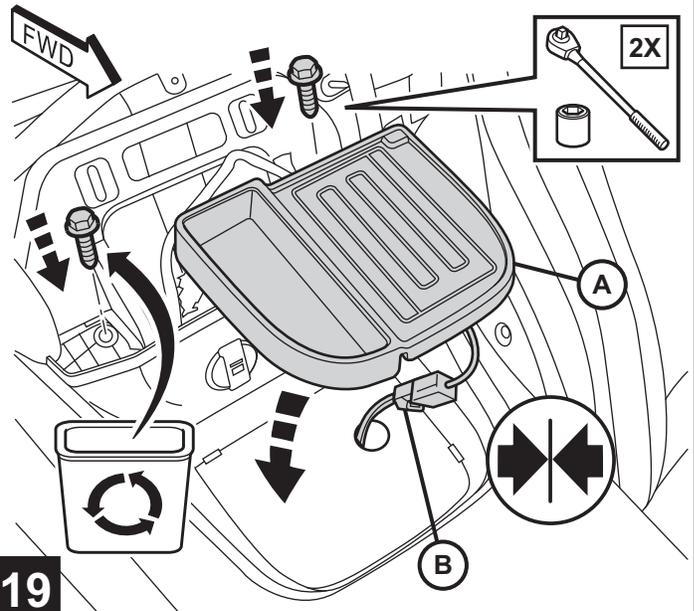

18

19

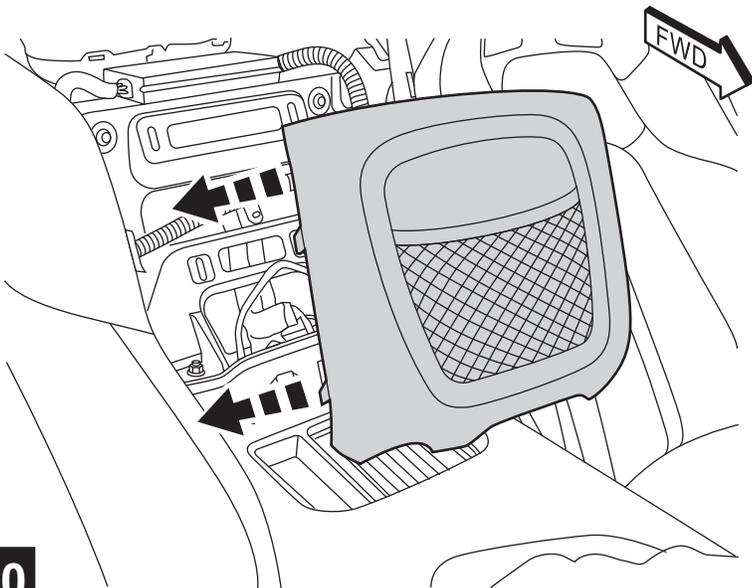

20

21

