



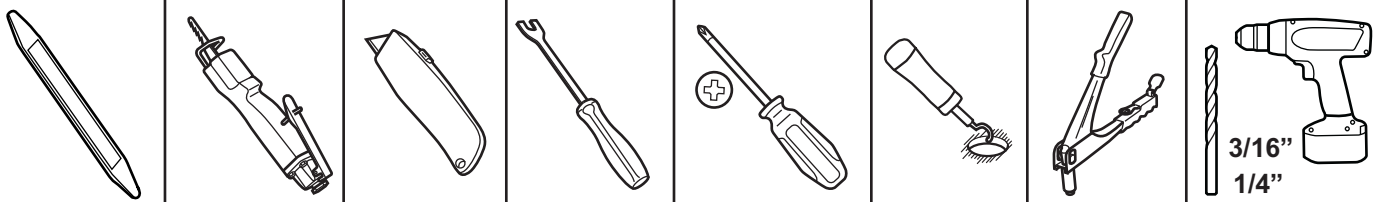


# PACIFICA TRAILER HITCH BEZEL

www.mopar.com

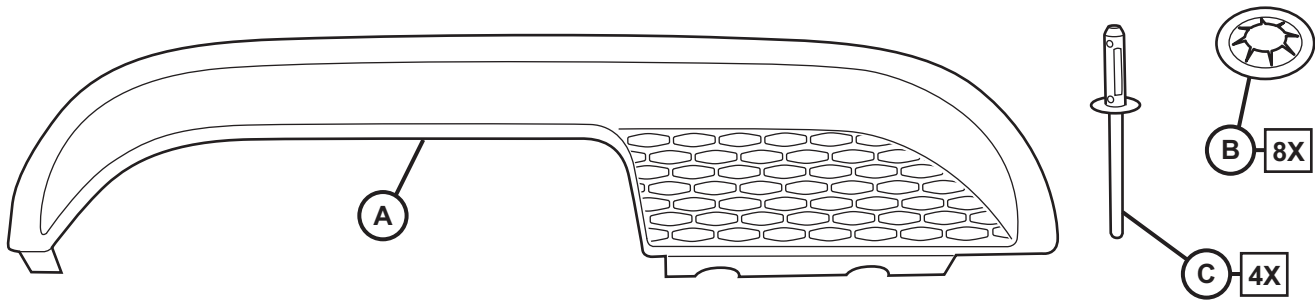


FOLLOW THESE STEPS AFTER REMOVING FASCIA AS SHOWN IN HITCH RECEIVER I-SHEET K6859745

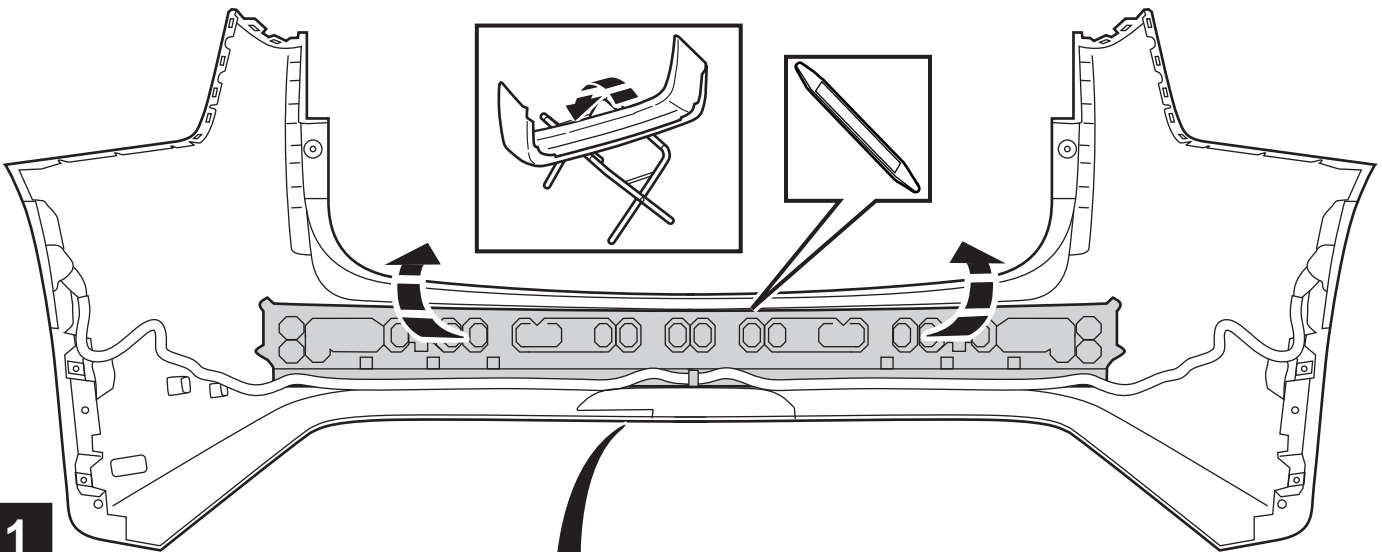


1

TOP

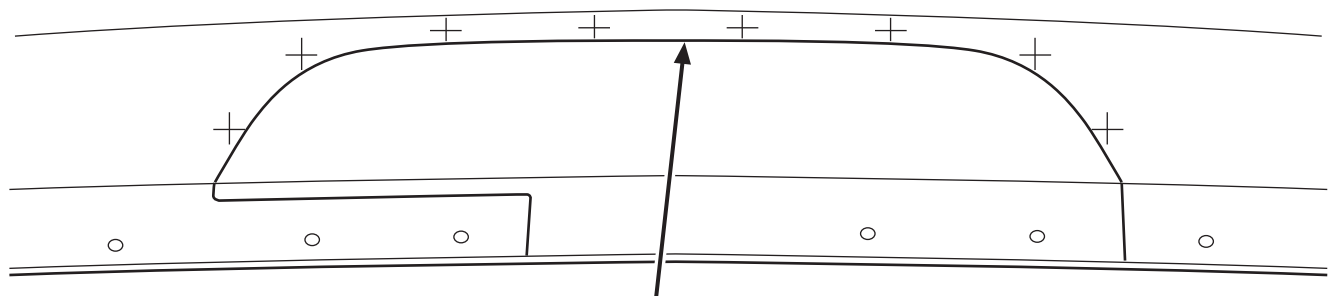


2

LOCATE SCRIBE LINE AND CROSS MARKS AT INSIDE BOTTOM CENTER


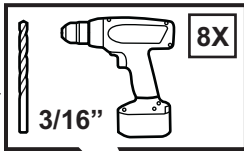


DRILL 3/16" HOLES ALL EIGHT (8) CROSS MARK LOCATIONS.  
NOTE: HOLES CAN BE ENLARGED TO 1/4" IF NECESSARY.

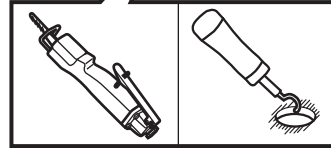



3

USE A SAW OR DREMEL TOOL TO CUT OUT THE MARKED AREA.  
DISCARD SCRAP MATERIAL. CLEAN EDGES.

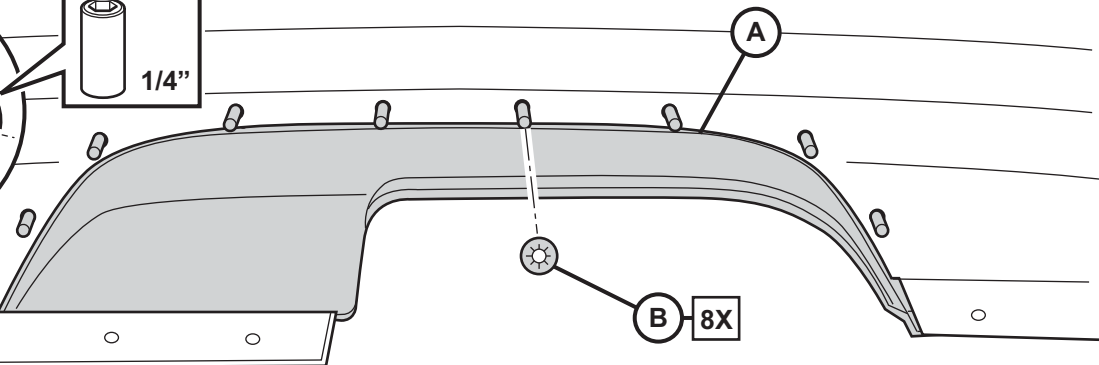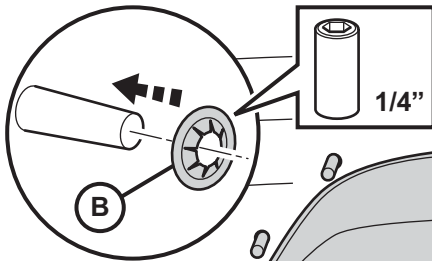


4

POSITION BEZEL (A) IN OPENING. USE A 1/4" DEEP WELL SOCKET TO INSTALL  
PUSH NUTS (B) ONTO STUDS. BE CERTAIN TO FULLY SEAT ALL EIGHT LOCATIONS.

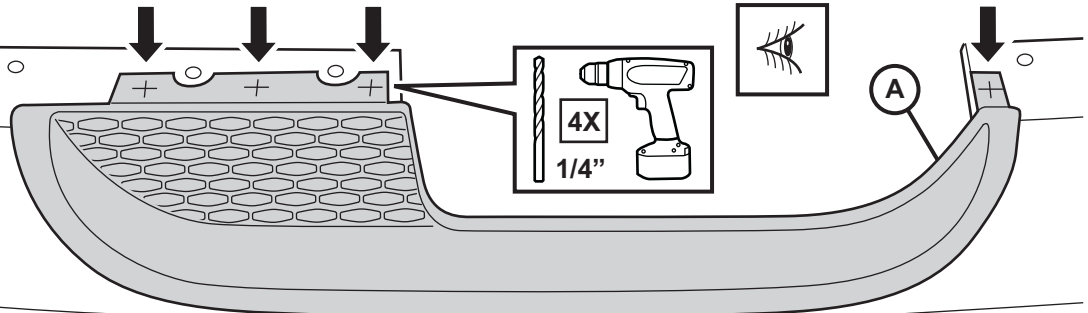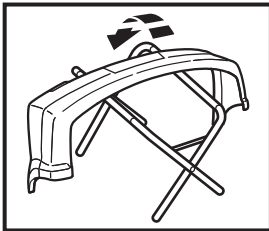

5

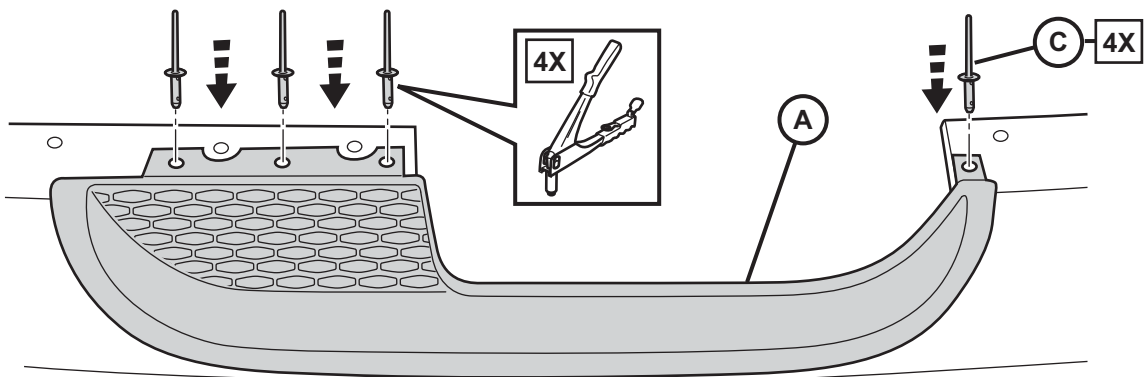

6

REINSTALL FASCIA ACCORDING TO STEPS SHOWN IN HITCH RECEIVER I-SHEET K6859745

7