

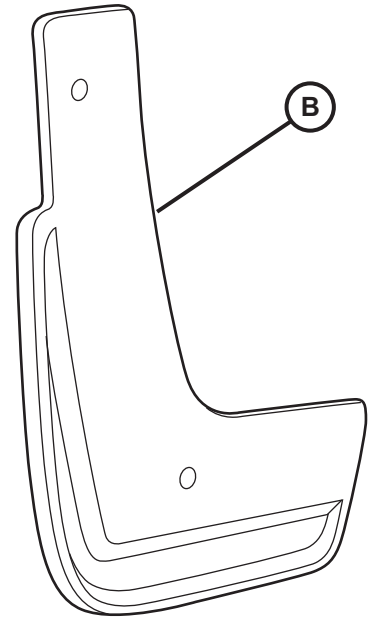


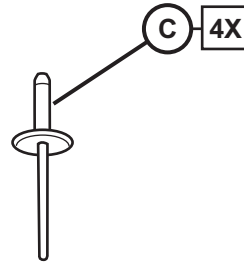







# FIAT SPIDER FRONT AND REAR SPLASH GUARDS

www.mopar.com


## FRONT SPLASH GUARDS






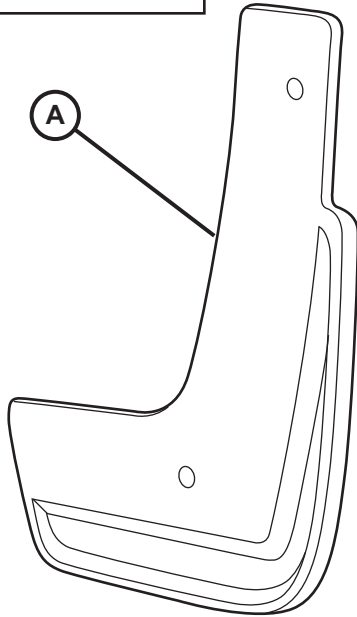


## REAR SPLASH GUARDS

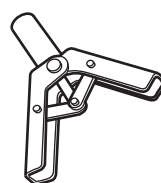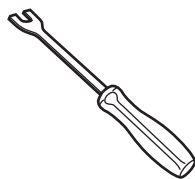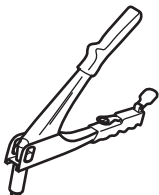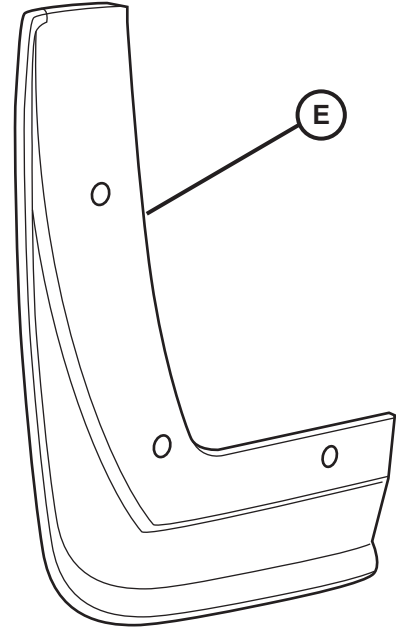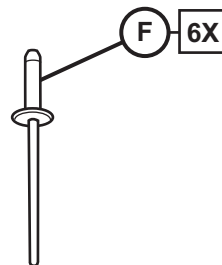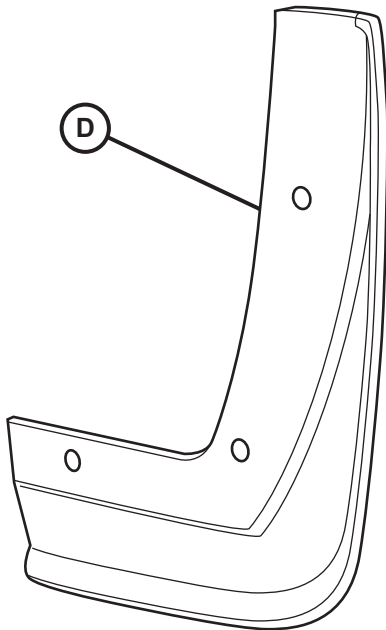


13/64"  
(5mm)

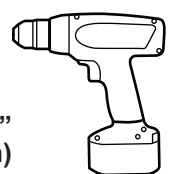


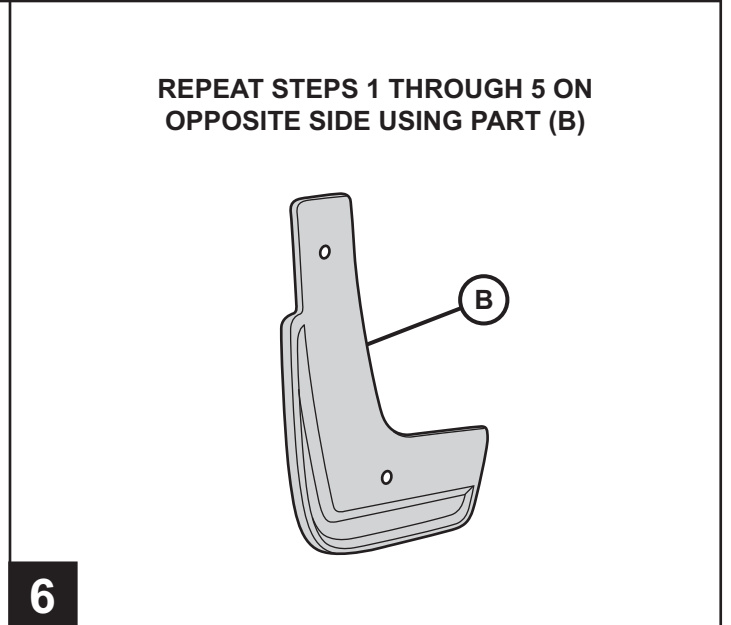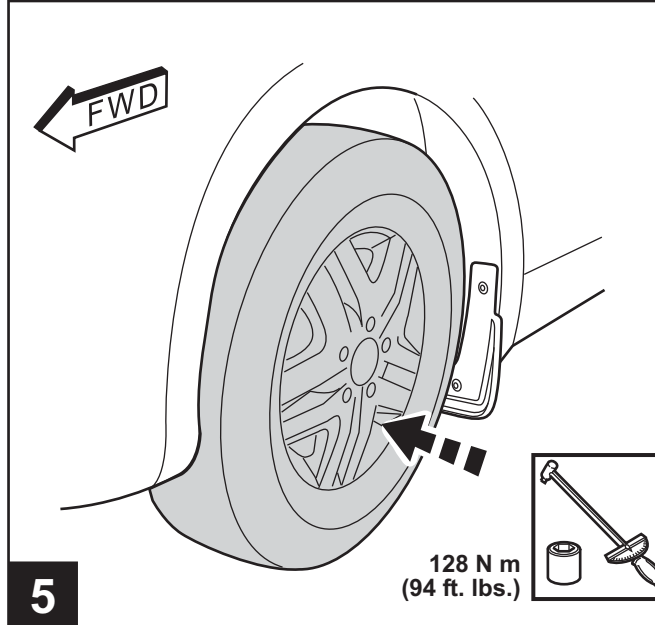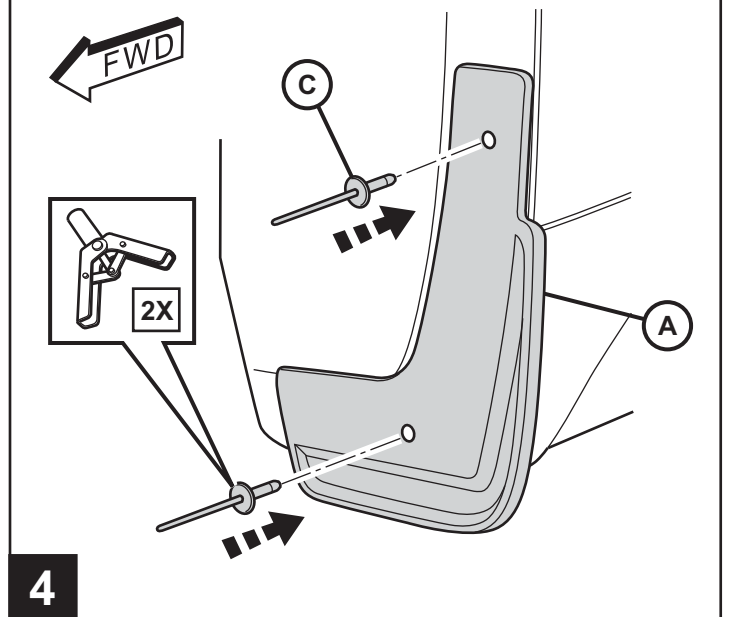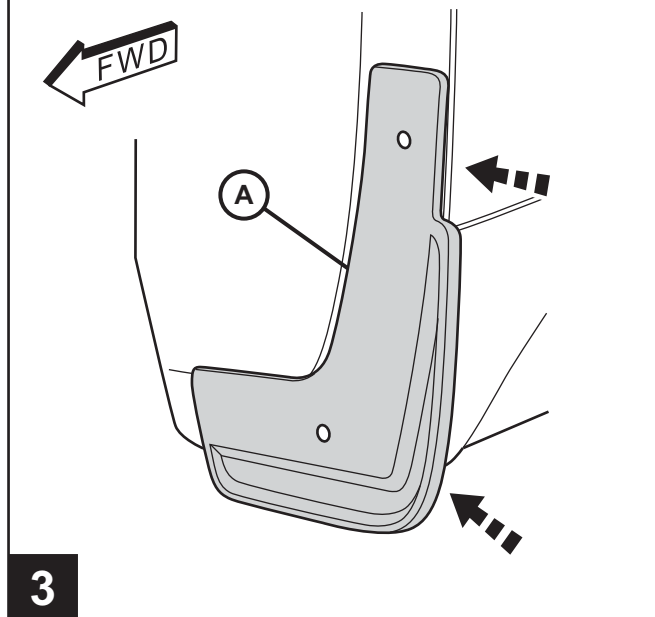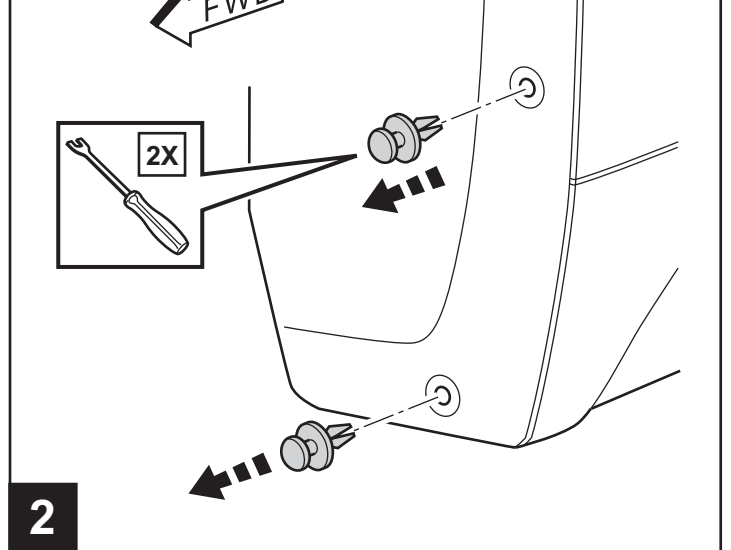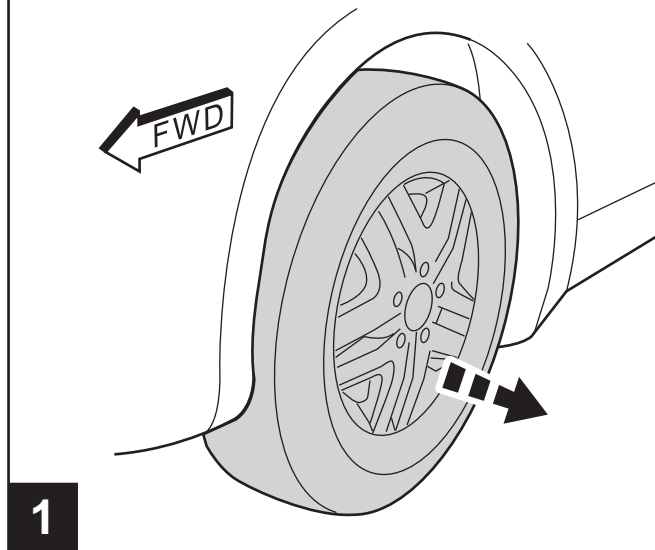**FRONT SPLASH GUARD INSTALLATION**


# REAR SPLASH GUARD INSTALLATION

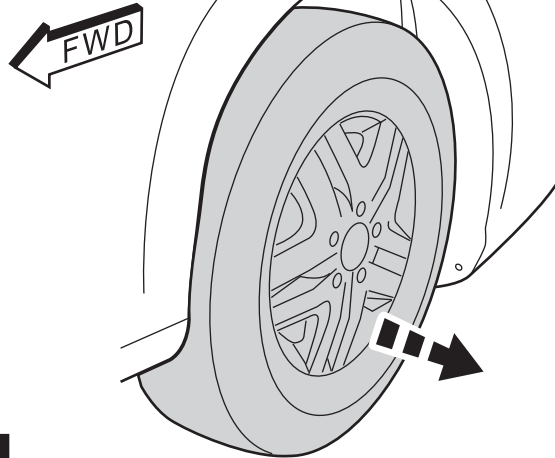


7

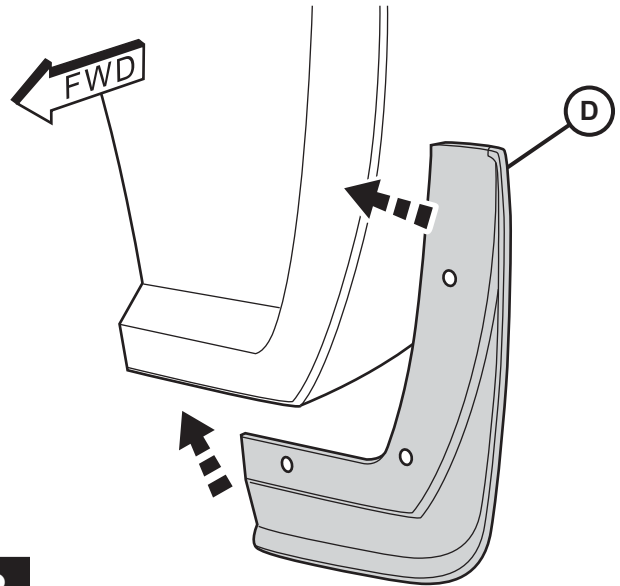


8

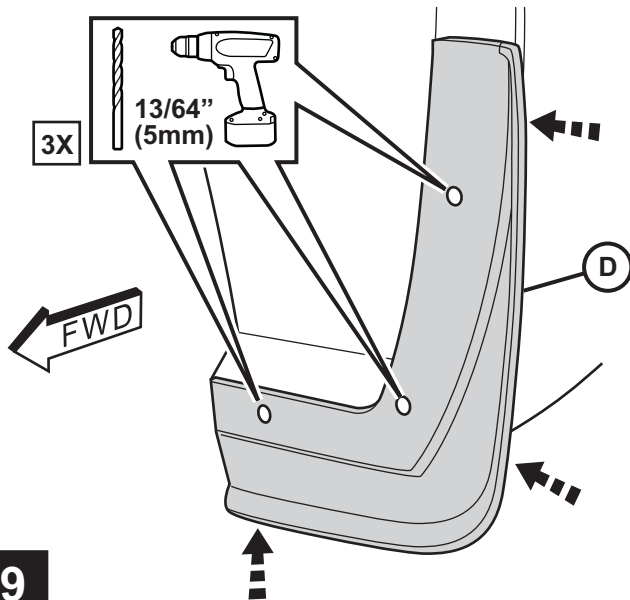

9

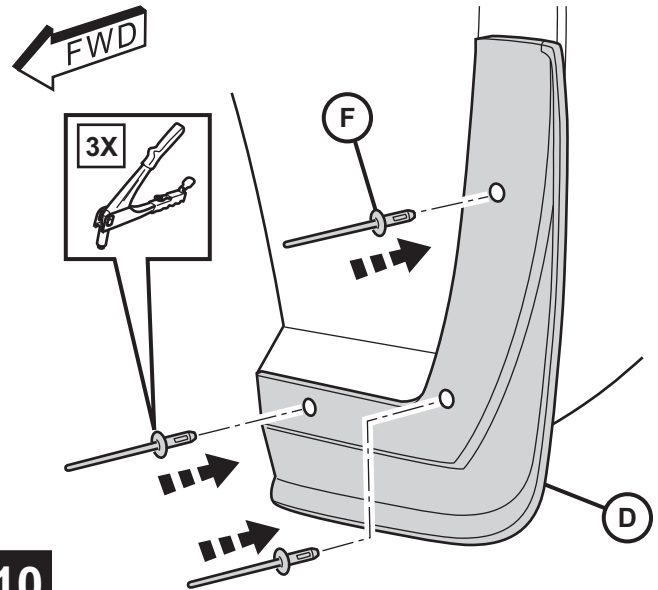


10

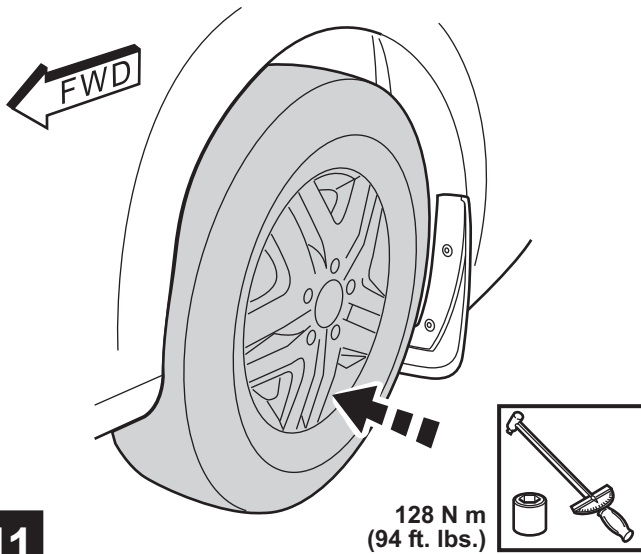

11

REPEAT STEPS 7 THROUGH 11 ON  
OPPOSITE SIDE USING PART (E)

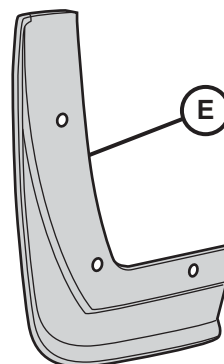

12